Order No. MTNC030728A1
B05

Service Manual

Color Television

CT-27C8G / CT-27G8G / CT-27G8UG / CT-27L8G / CT-27L8UG / CT-27L8SG

NA10

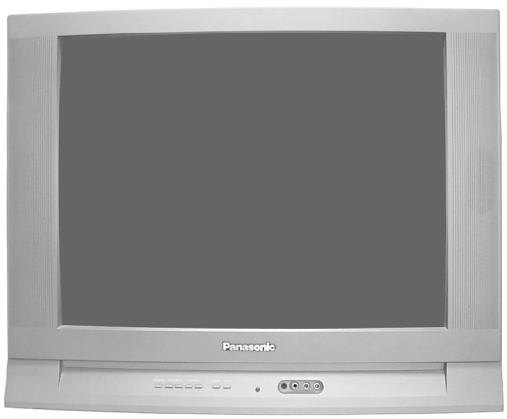

Panasonic®

1. Safety precautions

General guidelines

An isolation transformer should always be used during the servicing of a receiver whose chassis is not isolated from AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injuryfrom electrical shocks. It will also protect the receiver from being damaged by accidental shorting that may occur during servicing.
When servicing, observe the original lead dress, especially in the high voltage circuit. Replace all damaged parts (also parts that show signs of overheating.)
Always replace protective devices, such as fish paper, isolation resistors and capacitors, and shields after servicing the receiver. Use only manufacturer's recommended rating for fuses, circuits breakers, etc.
High potentials are present when this receiver is operating. Operation of the receiver without the rear cover introduces danger for electrical shock. Servicing should not be performed by anyone who is not thoroughly familiar with the necessary precautionswhen servicing high voltage equipment.
Extreme care should be practiced when handling the picture tube. Rough handling may cause it to implode due to atmospheric pressure. (14.7 lbs per sq. in.). Do not nick or scratch the glass or subject it to any undue pressure. When handling, usesafety goggles and heavy gloves for protection. Discharge the picture tube by shorting the anode to chassis ground (not to the cabinet or to other mounting hardware). When discharging connect cold ground (i.e. dag ground lead) to the anode with a wellinsulated wire or use a grounding probe.Avoid prolonged exposure at close range to unshielded areas of the picture tube to prevent exposure to x ray radiation.
The test picture tube used for servicing the chassis at the bench should incorporate safety glass and magnetic shielding. The safety glass provide shielding for the tube viewing area against x ray radiation as well as implosion. The magnetic shieldlimits the x ray radiation around the bell of the picture tube in addition to the restricting magnetic effects. When using a picture tube test jig for service, ensure that the jig is capable of handling 50kV without causing x ray radiation.
Before returning a serviced receiver to the owner, the service technician must thoroughly test the unit to ensure that is completely safe to operate. Do not use a line isolation transformer when testing.

Leakage current cold check

Unplug the A.C. cord and connect a jumper between the two plug prongs.Measure the resistance between the jumpered AC plug and expose metallic parts such as screwheads, antenna terminals, control shafts, etc. If the exposed metallic part has a returnpath to the chassis, the reading should be between 240k Ω and 5.2M Ω . If the exposed metallic part does not have a return path to the chassis, the reading should be infinite.

Leakage current hot check

Plug the AC cord directly into the AC outlet. Do not use an isolation transformer during the check.
Connect a 1.5k Ω 10 watt resistor in parallel with a 0.15 μ F capacitor between an exposed metallic part and ground. Use earth ground, for example a water pipe.
Using a DVM with a 1000 ohms/volt sensitivity or higher, measure the AC potential across the resistor.
Repeat the procedure and measure the voltage present with all other exposed metallic parts. Verify that any potential does not exceed 0.75 volt RMS. A leakage current tester (such a Simpson model 229, Sencore model PR57 or equivalent) may be used in the above procedure, in which case any current measure must not exceed 0.5 milliamp. Ifany measurement is out of the specified limits, there is a possibility of a shock hazard and the receiver must be repaired and rechecked before it is returned to the customer.

Hot check circuit

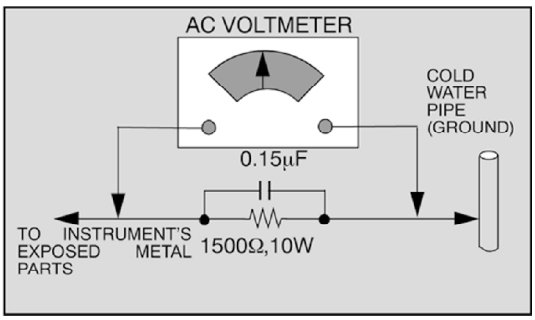

Insulation test

Connect an insulation tester between an exposed metallic part and A.C. line. Apply 1080VAC/ 60Hz for 1 second. Confirm that the current measurement is 0.5mA ~ 2.0mA. Repeat test with other metallic exposed parts.

X ray radiation

WARNING
The potential source of x ray radiation in the TV set is in the high voltage section and the picture tube.

NOTE
It is important to use an accurate, calibrated high voltage meter.

Set the brightness, picture, sharpness and color controls to minimum.

Measure the high voltage. The high voltage should be 29.25 ± 1.25kV. If the upper limit is out of tolerance, immediate service and correction is required to insure safe operation and to prevent the possibility of premature component failure.

Horizontal oscillator disable circuit test

This test must be performed as a final check before the receiver is returned to the customer. See horizontal oscillator disable circuit procedure check in this manual.

2. Service notes

NOTE

These components are affixed with glue. Be careful not to break or damage any foil under the component or at the pins of the ICs when removing. Usually applying heat to the component for a short time while twisting with tweezers will break the component loose.

Leadless chip component (surface mount)

Chip components must be replaced with identical chips due to critical foil track spacing. There are no holes in the board to mount standard transistors or diodes. Some chips capacitor or resistor board solder pads may have holes through the board,however the hole diameter limits standard resistor replacement to 1/8 watt. Standard capacitor may also be limited for the same reason. It is recommended that identical components be used.

Chip resistor have a three digit numerical resistance code, 1st and 2nd significant digits and a multiplier. Example: 162 = 1600 or 1.6k Ω resistor, 0 = 0 Ω (jumper).

Chip capacitors generally do not have the value indicated on the capacitor. The color of the component indicates the general range of the capacitance.

Chip transistors are identified by a two letter code. The first letter indicates the type and the second letter, the grade of transistor.

Chip diodes have a two letter identification code as per the code chart and are a dual diode pack with either common anode or common cathode. Check the parts list for correct diode number.

Component removal

1. **Use solder wick to remove solder from component end caps or terminal.**
2. **Without pulling up, carefully twist the component with tweezers to break the adhesive.**
3. **Do not reuse removed leadless or chip components since they are subject to stress fracture during removal.**

Chip component installation

1. **Put a small amount of solder on the board soldering pads.**
2. **Hold the chip component against the soldering pads with tweezers or with a miniature alligator clip and apply heat to the pad area with a 30 watt iron until solder flows. Do not apply heat for more than 3 seconds.**

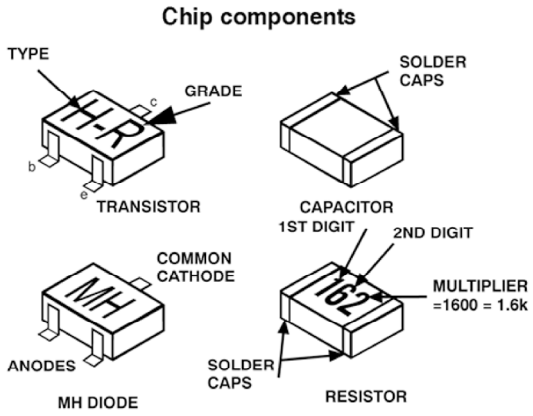

How to replace flat ic (required tools)

1. **Remove the solder from all of the pins of a Flat IC by using a desolder braid**

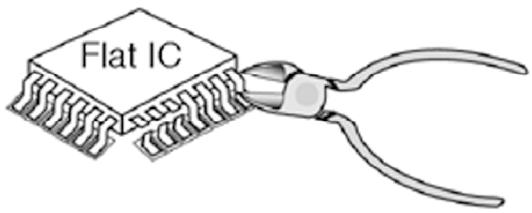

2. **Put the iron wire under the pins of the Flat IC and pull it in the direction indicated while heating the pins using a soldering iron. A small awl can be used instead of the iron wire.**

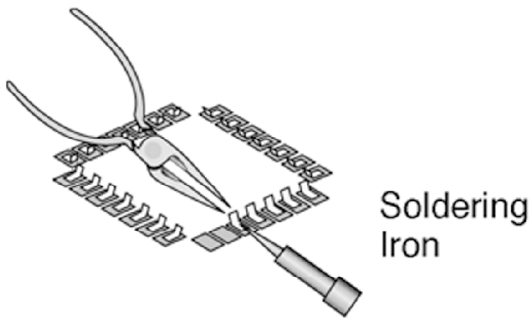

3. **Remove the solder from all the pads of the Flat IC by using a de solder braid**

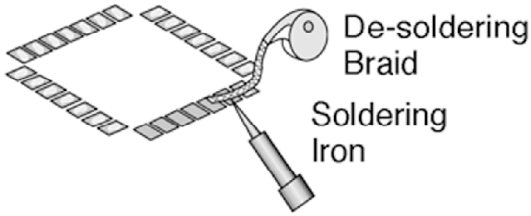

4. **Position the new Flat IC in place (apply the pins of the Flat IC to the soldering pads where the pins need to be soldered). Properly determine the positions of the soldering pads and pins by correctly aligning the polarity symbol**

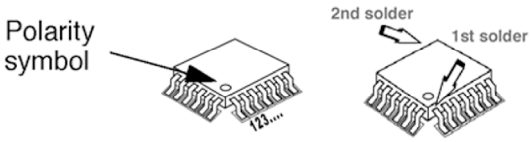

5. **Solder all pins to the soldering pads using a fine tipped soldering iron**

6. **Check with a magnifier for solder bridge between the pins or for dry joint between pins and soldering pads. To remove a solder bridge, use a de solder braid as shown in the figure below**

IMPORTANT

To protect against possible damage to the solid state devices due to arching or static discharge, make certain that all ground wires and CRT DAG wire are securely connected.

CAUTION

The power supply circuit is above earth ground and the chassis cannot be polarized. Use an isolation transformer when servicing the receiver to avoid damage to the test equipment or to the

chassis. Connect the test equipment to the proper ground(hot) or (cold) when servicing, or incorrect voltages will be measured.

2.1. X-Ray Protection Circuit Check& Adjustments

This test must be performed as final check before the receiver is returned to the customer. If voltages are out of tolerance, immediate service and correction is required to insure safe operation and to prevent the possibility of premature componentfailure.

Equipment:

1. **Isolation transformer.**
2. **High voltage meter.**
3. **D.C. Ammeter**
4. **Short jumper.**
5. **HHS jig (See figure below).**

Diode Connection Jumper.

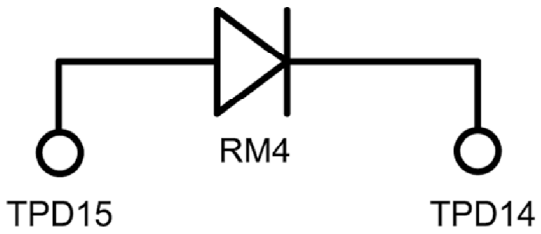

Preparation:

1. **Make sure the receiver is turned off.**
2. **Connect the receiver to an isolation transformer.**
3. **Connect the ammeter serial from the flyback anode lead to the picture tube anode socket.**
4. **Prepare short jumper and HHS jig.**

Procedure:

1. **Connect the short jumper between TPD16 & TPD17.**
2. **Connect the jumper diode between TPD14 and TPD15 (anode connected to TPD15 and cathode to TPD14).**
3. **Apply 75VAC to AC input of isolation transformer.**
4. **Turn the receiver on.**

5. **Apply a monoscope pattern.**
6. **Set customer picture and brightness controls to the minimum.**
7. **Set current within 50 μA to 100 μA by changing the picture and bright controls.**
8. **Slowly increase AC voltage at the input of the isolation transformer and confirm HHS voltage measure 33kV.**
9. **Turn power off and remove jigs.**

3. EEPROM replacement

If a new EEPROM integrated circuit is replaced for servicing, follow the next procedure once that the memory is properly assembled:

1. **Enter to service mode.**
2. **Turn the TV set ON.**
3. **Once inside service mode the first image that appears on-screen is the ID1 register with the respective address value (FF) like the image below.**

   Note:

   All 3 registers (ID1,ID2,ID3) should appear with FF values if a new EEPROM is assembled.

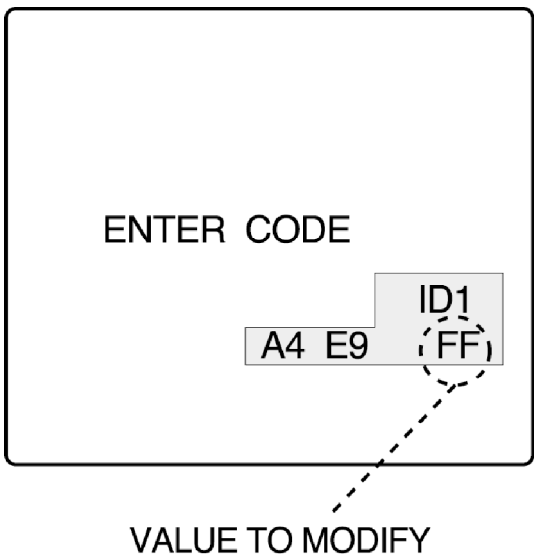

4. **With "VOL" keys adjust the correct value according with the service adjustment table (see "Service Mode" section on page 15).**
5. **Change to the next ID switch register with "CH" keys and repeat**

the same procedure as step 4.

6. **When replacing a new EEPROM be sure to set the correct ID switch values for each model.**
7. **Once that all 3 registers are set with the correct address value, perform all of the remaining adjustments and servicing.**

IMPORTANT:

Correct ID switch configuration should be input when replacing EEPROM for each television model, otherwise if wrong values are configured, the television software will not function accordingly and properly.

4. About lead free solder (PbF)

NOTE

Lead is listed as (Pb) in the periodic table of elements. / In the information below, Pb will refer to lead solder, and PbF will refer to Lead Free Solder. / The lead free solder used in our manufacturing process and discussed below is (Sn+Ag+Cu). / Thatis Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For / service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be / used. / PCBs manufacturedusing lead free solder will have the "PbF" or a leaf symbol stamped on the / back of PCB.

CAUTION

- **Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30 ~ 40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).**
- **Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C). / If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If thisis not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.**
- **After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the**

opposite side.

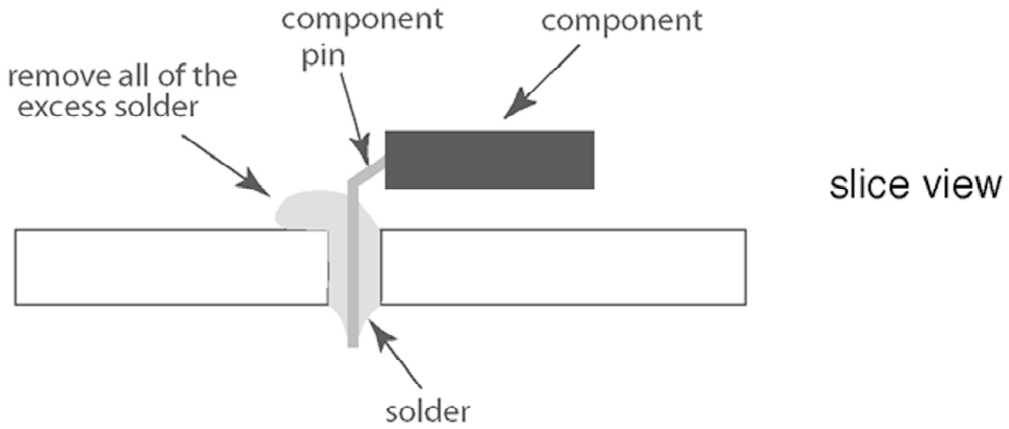

Suggested Pb free solder

There are several kinds of Pb free solder available for purchase. This product uses Sn+Ag+Cu (tin, silver, copper) solder. However, Sn+Cu (tin, copper), Sn+Zn+Bi (tin, zinc, bismuth) solder can also beused.

0.3mm X 100g	0.6mm X 100g	1.0mm X 100g
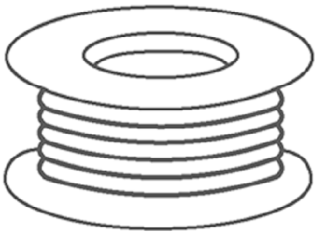	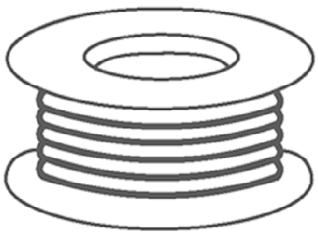	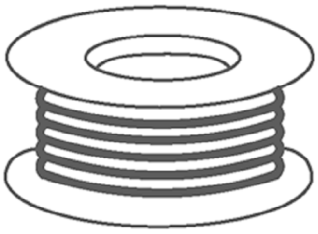

5. Receiver feature table

FEATURE/MODEL	CT-27C8G	CT-27L8G/UG/SG	CT-27G8G/
CHASSIS	BP404		AP404
MICRO	128K		
MENU LANGUAGE	ENG/SPAN/FR		
CLOSED CAPTION	X		
V-CHIP (USA/CANADA)	X		
CHANNEL COUNT	181		
REMOTE CONTROL	EUR7613Z10	EUR7713010	
CRT SUPPLIER	MDDA		
CHASSIS	NA10		
COMB FILTER	DIGITAL		
V/A NORM (X=BOTH)	V		
MTS/SAP/DBX	X		
BUILT-IN AUDIO POWER	1.5Wx2 (10%)		
No. OF SPEAKERS	2		
AI SOUND	X		
A/V IN (REAR/FRONT)	2(2/1)		
COMPONENT INPUT (Y, Pb, Pr)	1		---
S-VIDEO INPUT (REAR/FRONT)	1/0		
DIMENSIONS(WxDxH)	754.3x534.3x601.6mm29.6[illegible]	[illegible]	[illegible]
WEIGHT (Kg/Lbs)	35.4/78.04	34.5/76.05	34.5/76.0
VIDEO INPUT JACK	1Vp-p 75 Ω , phono jack		
AUDIO INPUT JACK	500mV RMS 47k Ω		
HEADPHONE JACK	X		

Note:
Specifications are subject to change without notice or obligation. Dimensions and weights are approximate.

6. Board description table

CT-27G8G / CT-27G8UG

BOARD	PART NUMBER	DESCRIPTION
A	TNP2AH047GA	MAIN BOARD
C	TNP2AA122GA	CRT BOARD

CT-27L8G / CT-27L8UG / CT-27L8SG / CT-27C8G

BOARD	PART NUMBER	DESCRIPTION
A	TNP2AH047GB	MAIN BOARD
C	TNP2AA122GA	CRT BOARD

NOTE
When ordering a replacement board assembly, append an “S” to the board number

EXAMPLE
To order the A Board, for CT-27G8G the replacement board is TNP2AH047GAS.

7. TV Location of controls

Quick reference control operation	
1	**Power -** Press to turn ON or OFF.
2	**Volume** - Press to adjust sound level, or to adjust audio menus, video menus, and select operating features when menus are displayed
3	**Channel** - Press to select programmed channels. Press to highlight desired features when menus are displayed. Also use to select cable converter box channels after programming remote control infra-red codes (the TV/AUX/CABLE switch must be set in CABLE position).
4	**Action -** Press to display main menu and access on screen feature and adjustment menus.
5	**TV/Video -** Press to select TV or one of the video inputs, for the main picture or the PIP frame (when PIP frame is displayed).

8. Location of controls (remote)

8.1. EUR7713010

POWER
Press to turn ON and OFF.

VOL
Press to adjust TV sound and navigate in menus.

MUTE
Press to mute sound.

KEYBOARD
Press to select any channel.

R-TUNE
Press to switch to previously viewed channel or video mode.

SAP
Press to acces the secondary audio program broadcast.

CH
Press to select next or previous channel and navigate in menus.

TV/VIDEO
Press to select TV, Video mode.

RECALL
Press to display time, channel sleep timer and other options.

Note:
For additional information about this remote please refer to the owner's manual section remote operation, listed on the parts list section.

8.2. EUR7613Z10

POWER
Press to turn ON and OFF.

TV - VCR - DBS/CBL - DVD
Press to select a component.

MUTE
Press to mute sound.

TV/VIDEO
Press to select TV, Video mode.

MENU
Press to select TV, Video mode.

KEYBOARD
Press to select any channel.

R-TUNE
Press to switch to previously viewed channel or video mode.

SAP
Press to acces the secondary audio program broadcast.

CH
Press to select next or previous channel and navigate in menus.

VOL
Press to adjust TV sound and navigate in menus.

RECALL
Press to display time, channel sleep timer and other options.

GUIDE
DBS and DVD functions button.

EXIT
DBS menu function button.

PROG
Press for delimiter between major and minor channel number.

Note:
For additional information about this remote please refer to the owner's manual section remote operation, listed on the parts list section.

9. Dissasembly for service

Back cover

Remove all the screws marked with an arrow (←) from the back of the receiver

NOTE
Screw configuration, type, and number of screws vary depending on the model of the receiver serviced and the application; various models are covered in this manual. Use same hardware when reassembling the receiver.

- 3 screws at the top edge of the receiver.
- 1 screw by the A/V jacks.
- 1 screw at each lower corner of the receiver.
- 1 screw by the Flyback.
- 1 screw by the AC cord (only in CT-27C8G models).

A-Board - Main chassis

1. Slide the chassis completely out of the guide rails.
2. Stand the receiver on its edge. The underside of the board is completely accessible for component replacement.

Note:
Some tie-wraps that secure the wire dressings may need to be unfastened for chassis removal.

C-Board - CRT output

The board plugs onto the socket on the CRT neck. To release the Focus wire, use a dull object to release the tab on the socket (near the wire opening) and carefully pull on the wire. To connect the focus wire, press on the tab to lock it then insertthe wire in the opening and press on it until it is fully inserted and locked in place.

Focus cable release

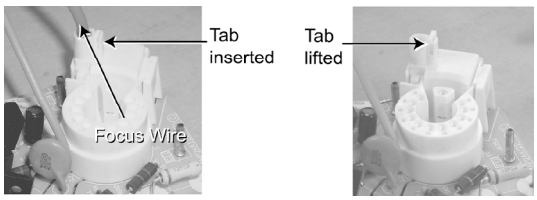

Speakers
Each speaker is secured to the cabinet with 4 screws.

NOTE
When reassembling speakers be sure to connect the speaker wires to the correct speaker lead (+) (-)

9.1. Disassembly for CRT replacement

1. Discharge the CRT as instructed in the “safety precautions”.
2. Disconnect the yoke (DY) plug, degaussing coil (DEG) plug from the main board.

3. **Unplug the CRT 2nd anode button from the main board.**
4. **Remove the C-Board from the CRT base and unplug the black wires (CRT dag ground) C10 & C11.**
5. **Disconnect the speakers plug from the A-Board.**
6. **Lift the main chassis (A-Board) and all mounted boards completely out with the CRT board attached.**
7. **Perform complete removal of chassis, as instructed in "disassembly for service" section.**

CRT replacement

1. **Perform "disassembly for CRT replacement" procedure.**
2. **Insure that the CRT H.V. Anode button is discharged before handling the CRT. Read the "safety precautions" section on handling the picture tube.**
3. **Remove the components from the CRT neck and place the cabinet face down on a soft pad.**
4. **Note the original order for the CRT mounting hardware as they are remove from the CRT mounting brackets at each corner of the CRT.**
5. **Remove the CRT with the degaussing coil and the dag ground braid attached.**
6. **Note the original locations and mounting of the degaussing coil and the dag ground assembly to insure proper reinstallation on the replacement CRT.**
   To remove and remount the degaussing coil:
   - **Unhook the coil spring from the bottom corners of the CRT ears.**
   - **Release the braid loop from the upper corners of the CRT ears.**
7. **Mount the dag ground braid on the replacement CRT. Position the degaussing coil with new ties.**
   Dress coil as was on the original CRT.
8. **Replace the components on CRT neck and reinstall into cabinet. Verify that all ground wires and circuit board plugs get connected.**

IMPORTANT NOTICE

When ordering the CRT, please order CRT and CRT kit also. Please see parts list section for part numbers.

9.2. Back Cover Removal

Back Cover (CT-27C8G).

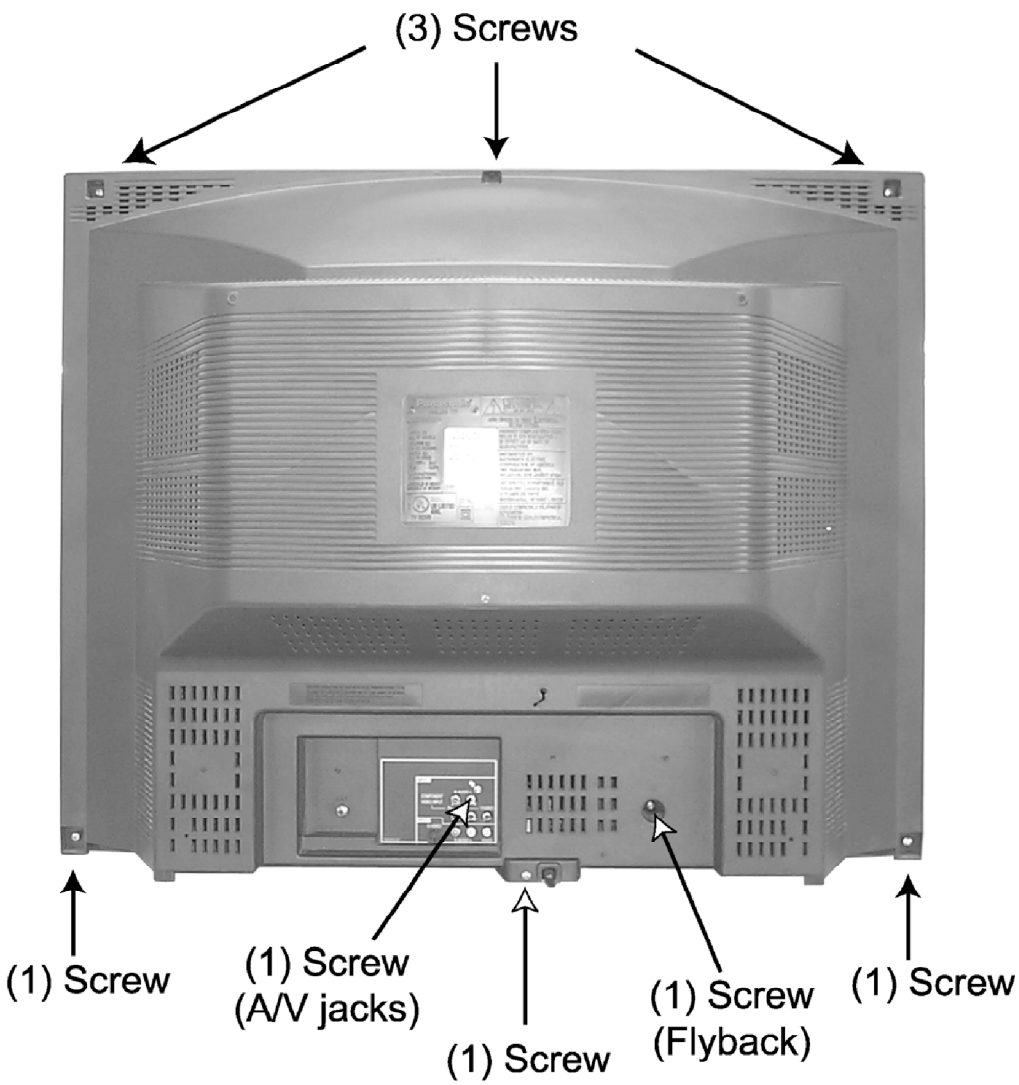

Back Cover (CT-27L8G/UG/SG, CT-27G8G/UG)

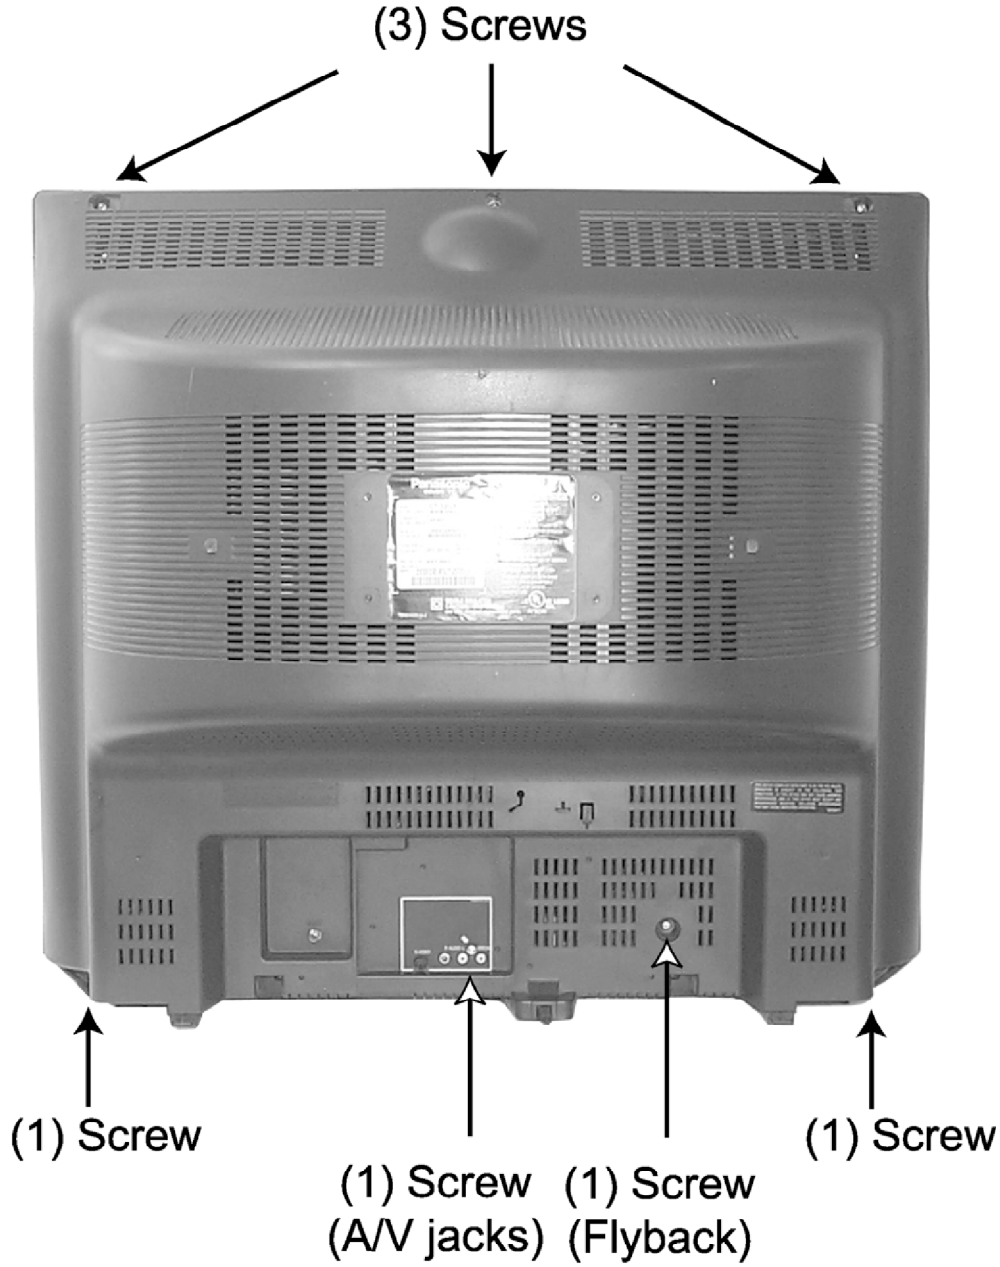

10. Chassis service adjustment procedures

All service adjustments are factory preset and should not require adjustment unless controls and/ or associated components are replaced.

Note:

Connect the (-) lead of the voltmeter to the appropriate ground. Use IC801's heat sink when the HOT ground symbol is used. Otherwise, use COLD ground (Tuner shield, IC451's heat sink or FA2).

Component and Voltage Test Points

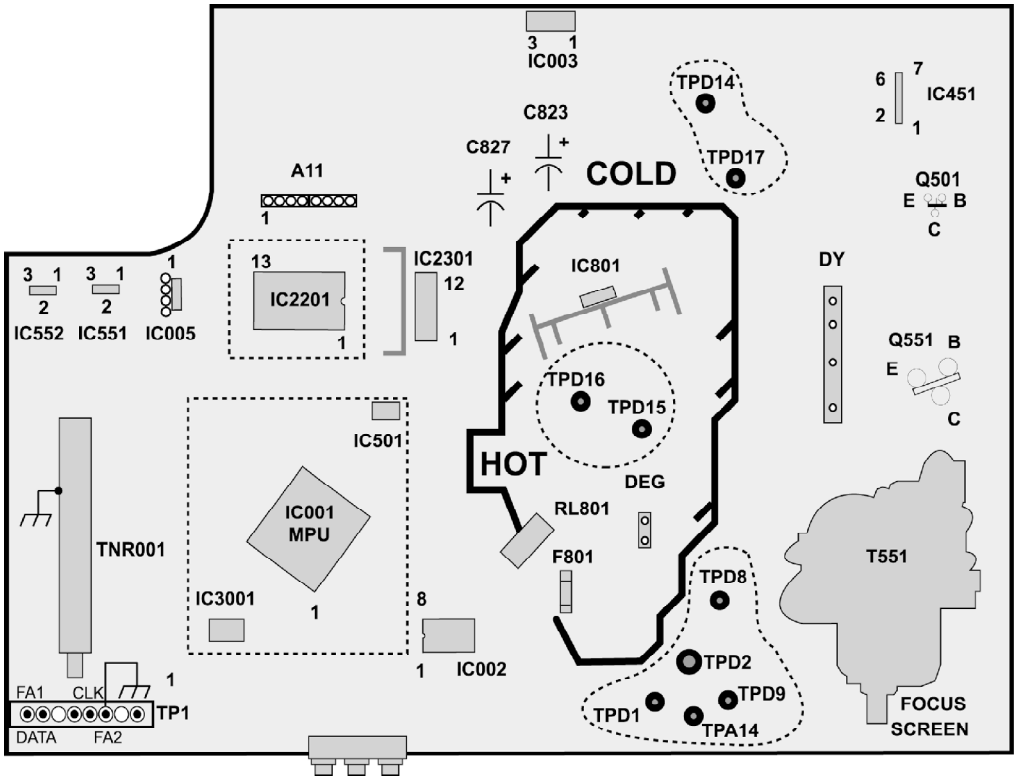

Note:

Components and test points within doted areas are located on trace side.

B+ voltage check

1. **Set the BRIGHT and PICTURE to minimum by using the PICTURE menu.**
2. **Connect the DVM between C825 (+ side) or TPD14 and cold ground.**
3. **Confirm that B+ voltage is 131.0V ± 2.0V. This voltage supplies B+ to the horizontal output and flyback circuits.**

Source voltage chart

120V AC line input. Set the BRIGHT and the PICTURE to minimum by using the PICTURE menu. Use cold or hot ground for the (-) lead of the DVM as needed.

A-BOARD	TEST POINT	VOLTAGE
+B2	TPD14	131.0 ± 2.0V
SOUND	C823 (+)	18.1 ± 1.0V
STB12V	C827 (+)	12.8 ± 1.0 V
220V	TPA14	217 ± 10 V
VERTICAL	TPD8	27.4 ± 1.5V
9V	IC551 pin 3	9.0 ± 0.5V
5V	IC552 pin 3	5.0 ± 0.5V
3.3V	IC005 pin 2	3.3 ± 0.3V
EHT	CRT anode	29.25 ± 1.25kV
HEATER	JK351 H-HGND	6.0 ± 0.24V

High voltage check

1. Select an active TV channel and confirm that horizontal is in sync.
2. Adjust BRIGHTNESS and CONTRAST using PICTURE icon menu so video just disappears.
3. Using a high voltage meter confirm that the high voltage is 29.25 ± 1.25kV.

11. Service mode (electronic adjustments)

This receiver has electronic technology using the IC bus concept. It performs as a control function and it replaces many mechanical controls. Instead of adjusting mechanical controls individually, many of the control functions are now performedby using “on screen display menu”. (The service adjustment mode).

NOTE

It is suggested that the technician reads all the way through and understand the following procedure for entering/exiting the service adjustment mode; then proceed with the instructions working with the receiver. When becoming familiarwith the procedure, the flow chart for service mode may be used as a quick guide.

Quick entry to service mode

When minor adjustments need to be done to the electronic controls, the method of entering the service mode without removal of the cabinet back is as follows using the remote control:

1. Select SET-UP icon and select CABLE mode.
2. Select TIMER icon and set SLEEP time for 30 Min.
3. Press “ACTION” twice to exit menus.
4. Tune to the channel 124.

5. Adjust VOLUME to minimum (0).

6. Press VOL → (decrease) on receiver. Red “CHK” appears in upper corner.

To toggle between aging and service modes:

While the “CHK” is displayed on the left top corner of the CRT, pressing “ACTION” and “VOL” UP on the TV simultaneously will toggle between the modes. Red “CHK” for serviceand yellow “CHK” for aging.

7. Press POWER on the remote control to display the service adjustment modes menu, select adjustment by pressing the volume right/left buttons and channel up/down buttons on the remote and ACTION to enter the adjustment.

MTS	MTSIN	SEPAL	SEPAH	
CLOCK	CLOCK			HHSTH
VIDEO	COLOR	TINT	BRIGH	CONT
	B-Y_G	CUT_G	CUT_R	CUT_B
	BRT	R-DR	B-DR	
HDEF	H POS			
VDEF	VEAMP	V-C	V-S	VPOS
SETID	ID1	ID2	ID3	

Exiting the service mode:

This TV goes out from service mode when it is unplugged or turned OFF. To exit the service mode, turn the TV OFF from or unplug the TV from A.C.

Other method

Press ACTION and POWER on the receiver simultaneously for at least 2 seconds.
The receiver momentarily shuts off; then comes back on tuned to channel 3 with a preset level of sound.
Any programmed channels, channels caption data and some others user defined settings will be erased when exited by pressing ACTION and POWER on receiver.

IMPORTANT NOTE
Always check that the TV exits the service mode.

To confirm colors

When in service mode (red “CHK” is displayed) press RECALL on the remote control to enter the purity field check mode

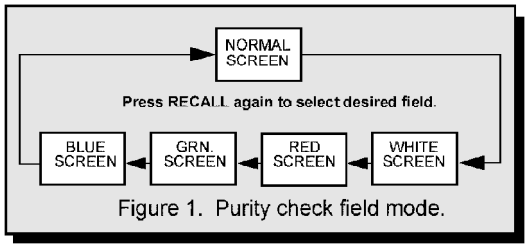

Figure 1. Purity check field mode.

Entering service mode (open-back method)

While the receiver is connected and operating in normal mode, momentarily short test point FA1 (TP1 pin 2) to cold ground (TP1 pin 3).
The receiver enters the aging mode.
Yellow letters "CHK" appear in the upper left corner of the screen. / (The volume right/left and channel up/down will adjust rapidly).

Note:

If service mode is accessed by this method be sure to reset the set after service is performed.

11.1. Service adjustment default values for items

NAME	DESCRIPTION	REGISTER VALUE		
		CT-27C8G	CT-27G8G/UG	CT-27L8G/UG/SG
MTSIN	MTS INPUT LEVEL	17		
SEPAL	MTS LOW LEVEL SEPARATION	08		
SEPAH	MTS HIGH LEVEL SEPARATION	1D		
CLOCK	CLOCK	128		
HHSTH	HHS VOLTAGE LEVEL REFERENCE	8C		
COLOR	COLOR	15		
TINT	TINT	56		
BRIGH	SUB-BRIGHTNESS	4E		
CONT	SUB-CONTRAST	60		
B-Y_G	MAGENTA TINT ADJ	80		
CUT_G	GREEN CUT-OFF	C3		
CUT_R	RED CUT-OFF	0E		
CUT_B	BLUE CUT-OFF	5B		
BRT	BRIGHT	4E		
R-DR	RED DRIVE	00		
B-DR	BLUE DRIVE	00		
H-POS	HORIZONTAL POSITION	70		
VEAMP	VERTICAL SIZE	AA		
V-C	VERTICAL LINEARITY	4C		
V-S	VERTICAL SIZE CORRECTION	00		
VPOS	VERTICAL POSITION	7C		
ID1*	ID SWITCH 1	F0	88	F0

NAME	DESCRIPTION	REGISTER VALUE		
		CT-27C8G	CT-27G8G/UG	CT-27L8G/UG/SG
ID2*	ID SWITCH 2	06	06	06
ID3*	ID SWITCH 3	30	30	30

IMPORTANT:

These table values are approximated and could change due to variation of electrical characteristics in each set, except for the ID switch values.

***Note:**

The correspondent ID switch (ID1,ID2, ID3) data configuration should not be modified in any way. If EEPROM circuit needs to be replaced, these ID values should be configured according with this table.

12. Service adjustments (electronic controls)

NOTE
Please correlate with available pattern on all adjustments

12.1. Sub-Brightness and Contrast / Service DAC adjustment (BRIGH, CONT)

Adjustment of this control is important for setting proper operation of customer brightness and picture controls. Do not adjust the SCREEN VR after the sub-brightness is set.
This adjustment is factory set. Do not adjust unless repairs are made to associated circuit, the CRT Board or when the CRT is replaced.

Preparation

1. **Apply a colorbar pattern.**
2. **Set the PICTURE control to the maximum.**
3. **Set COLOR control to minimum (no color on picture).**
4. **Set the BRIGHTNESS control to the center.**
5. **Set the SHARPNESS control to the center.**
6. **Connect the oscilloscope to TP35.**

Procedure

1. **In the service mode, select DAC for brightness adjustment “BRIGH”, and adjust data to obtain 3.6±0.1V between 7.5IRE and**

GND level at TP35. (See waveform detail).

2. In service mode, select DAC for contrast adjustment “CONT”, and adjust data to obtain between 7.5IRE and 100IRE level at TP35. (See waveform detail)

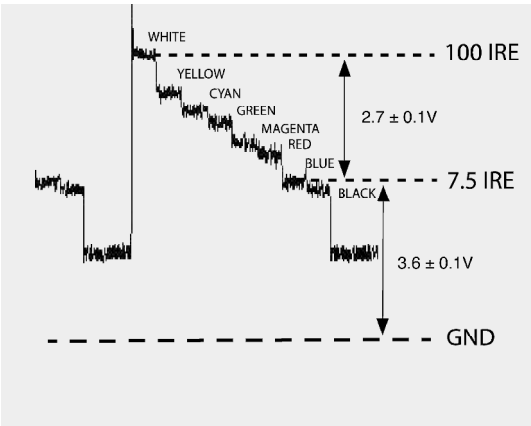

12.2. Color output adjustment / Service DAC adjustment (COLOR, TINT)

NOTE
if a rainbow pattern generator is available perform the following procedure; the next section describes the procedure with no rainbow pattern.

Make sure that sub-contrast adjustment was finished prior to perform this adjustment.

PREPARATION

1. Normalize the picture settings.
2. Set the BRIGHTNESS control to minimum.
3. Set the COLOR control to the center.
4. Set the TINT control to the center.
5. Set the PICTURE control to the maximum.
6. Set the SHARPNESS control to the minimum.

PROCEDURE

1. Apply a rainbow color bar pattern.
2. Connect the oscilloscope to TP37.

3. In service mode adjust “TINT” register until the waveform measured is as the one shown. Tint level from A and B peaks must be almost in the same level (0.35 Vp).

TP37 Waveform.

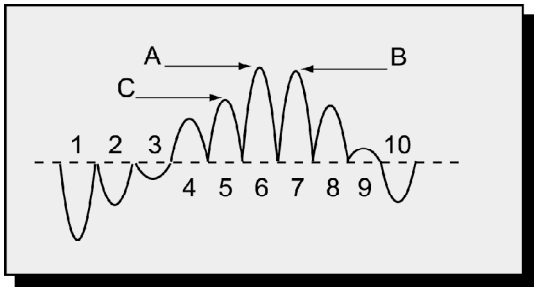

4. Connect the oscilloscope to TP35 and GND.
5. Adjust “COLOR” register so that the amplitude is 0.9±0.05Vp-p.

TP35 Waveform.

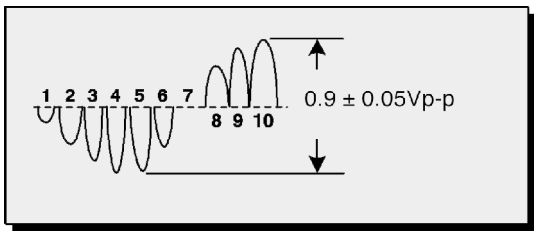

12.3. Color output adjustment / Service DAC adjustment / (COLOR, TINT, B-Y_G)

NOTE
Color and tint adjustment sets the reference settings for the user controls; It is important to read the procedures.

(NO RAINBOW PATTERN)
Make sure that sub-contrast adjustment was finished prior to perform this adjustment

PREPARATION
Normalize the picture settings.

PROCEDURE

1. Apply a color bar pattern.
2. In service mode adjust “R DR” and “B DR” data to “80”.

3. **In service mode adjust “TINT” data so that the color does not become greenish or redish.**
4. **In service mode adjust “COLOR” data so that the color level is not too high (saturated) or too low (tending to black and white).**
5. **In service mode adjust “B-Y G” data so that blue and green seem natural.**
6. **Confirm that saturation and picture are normal (normal image).**
7. **If image is not satisfactory, repeat adjustment until the image is normal and natural.**

NOTE
The image can be compared against other set to see the image quality.

12.4. Color temperature adjustment / (B/W Tracking) / Service DAC Adjust. / (CUT R) (CUT G) (CUT B) (R DR) (B DR)

Minor Touch-Up Method
OBSERVE low and high brightness areas of a B/W picture for proper tracking. Adjust only as required for “good gray scale and warm highlights”.

1. **LOW LIGHT areas - In service mode for making electronic adjustments, select CUT R, CUT G, CUT B and adjust the picture for gray.**
2. **HIGH LIGHT areas - In service mode for making electronic adjustments, select drive R DR, B DR and adjust the picture for warm whites.**

Complete adjustment

PREPARATION

1. **Turn the receiver “ON” and allow 30 minutes warm up at WHITE PATTERN.**
2. **Apply a color bar pattern (with no color).**
3. **Turn the SCREEN control (part of FBT T551) fully counterclockwise.**

4. Preset the following service DACs for best results:

- **BRIGH_____1 D0**
- **CUT R_____02 00**
- **CUT G_____02 00**
- **CUT B_____02 00**
- **R DR_____07 FF**
- **B DR_____07 FF**

PROCEDURE

1. **Connect the oscilloscope to KG (CRT-Board).**
2. **In service mode for making electronic adjustment, select “BRIGH” DAC.**
3. **Press RECALL button on the remote control to collapse the raster. (service SW).**
4. **Connect oscilloscope to KG on C-Board and adjust service mode “CUT-G” DAC until 195±2V above DC ground is measured**
5. **Remove the probe from KG.**
6. **Turn screen clockwise slowly until color is slightly appeared.**
7. **Then adjust “CUT R” and “CUT B” until line becomes white.**
8. **Press RECALL button on the remote to restore the raster.**
9. **Adjust “R DR” and “B DR” so the white seems like white and black like black.**
10. **Apply a normal signal and confirm that the image is normal and a good gray scale**
11. **If correction is needed perform minor touch-up method.**

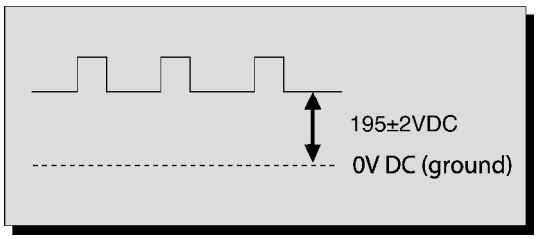

12.5. Deflection adjustments

To reset deflection adjustments

To reset deflection adjustments to factory adjusted default, enter to service mode (with red CHK displayed), press POWER button on remote to display the service menu, then press and hold RECALL button for at least three seconds, a reset messagewill appear in the image.
Use this feature when deflection adjustment gets off adjustment to the point that it cannot be adjusted back easily.

12.5.1. H-Center adjustment

PREPARATION

1. **Apply a crosshatch pattern.**
2. **Normalize the picture settings.**

PROCEDURE

1. **Apply a monoscope pattern to center the picture.**

Horizontal Center Adjustment

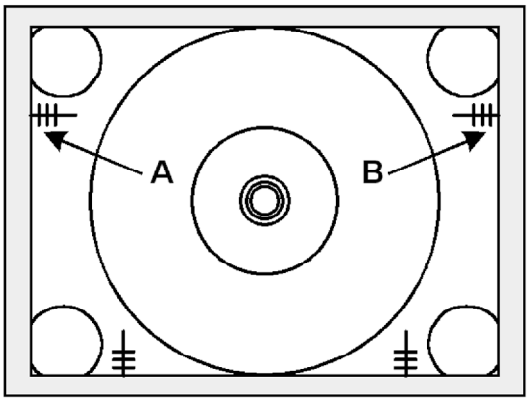

2. **If the horizontal center is not aligned, in service mode adjust “H POS” DATA to adjust the horizontal center of the monoscope pattern to the CRT center.**
3. **Verify that horizontal width (A & B mark) is within 4.5 ± 0.7.**

12.5.2. Vertical linearity(V-C), V-Size and V-Position adjustment

PREPARATION

1. **Apply a crosshatch pattern**
2. **Normalize the picture settings.**

PROCEDURE

1. **Enter service mode, select DAC adjustment / “V-POS” and adjust monoscope pattern to the center vertical position of the CRT center mark.**
2. **Adjust linearity data “V-C” so that interval of “a” is same as “b” (a= b).**

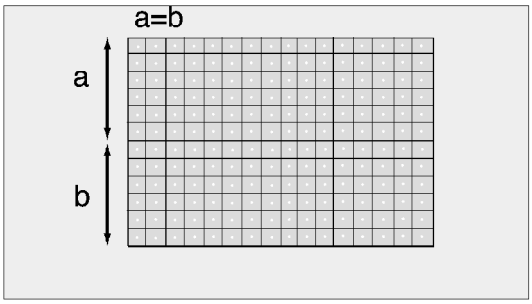

3. **If the v-position is not at the CRT center, adjust / V position “V POS” DATA again.**
4. **Apply a monoscope pattern.**
5. **Confirm that center horizontal line is in center mark on CRT.**
6. **Adjust “VEAMP” register for correct vertical size by making monoscope round circle leaving 4 marks off the CRT edge.**

Vertical centering adjustment.

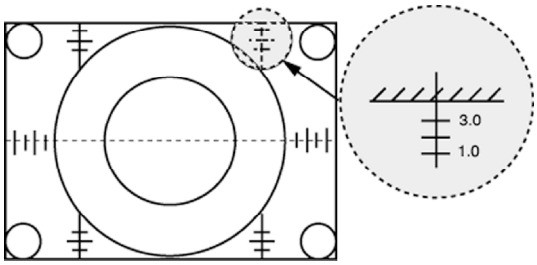

12.5.3. V-S Correction adjustment

PREPARATION

1. **Apply a crosshatch pattern**

2. Normalize the picture settings.

PROCEDURE

1. Enter to service mode

2. Check a and b sizes, If b-a < -1.5mm (in top & bottom extending case)

- Increase “V-S” DATA by one step

NOTE
Repeat “a” and “b” until b-a ± 1.5mm

3. Confirm to make outermost circle of monoscope pattern a correct circle

V-Adjustment

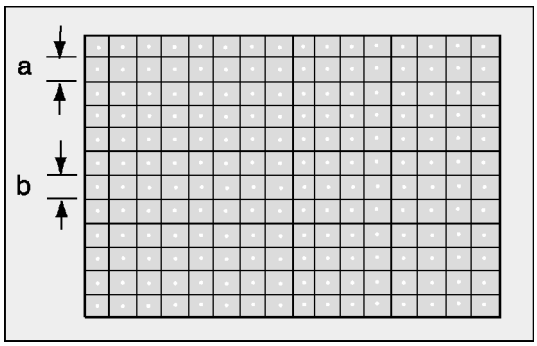

13. Identification of Components

13.1. Chassis Components

Rear view (inside cabinet)

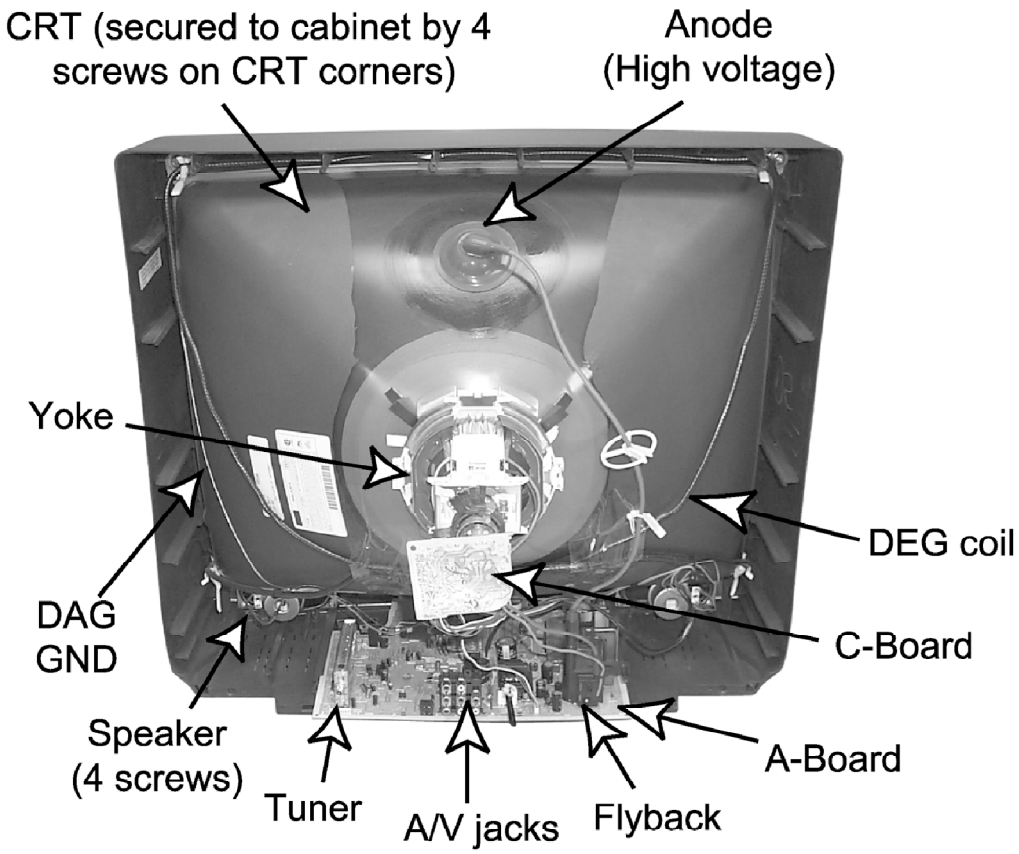

13.1.1. C-Board Chassis

C-Board component locations

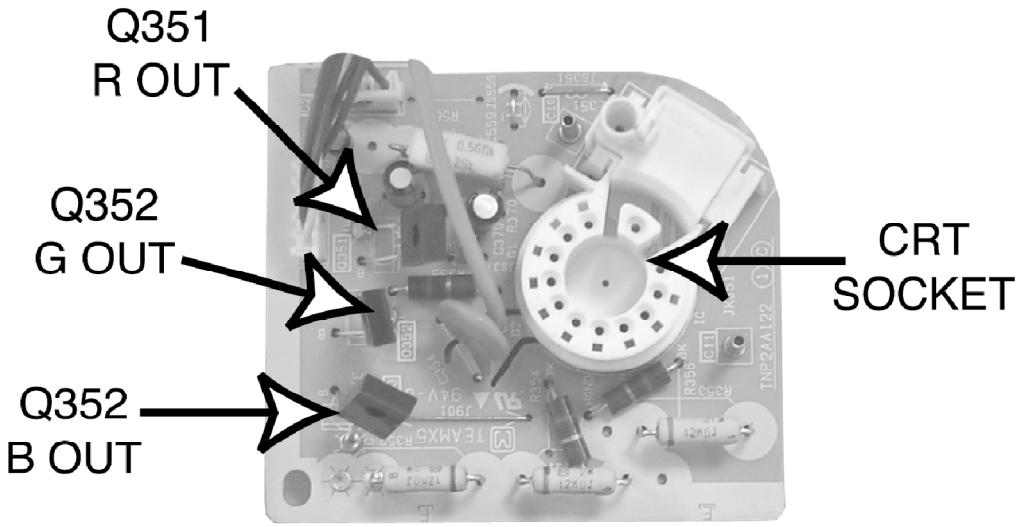

13.1.2. A-Board Chassis

A-Board chassis (Top view)

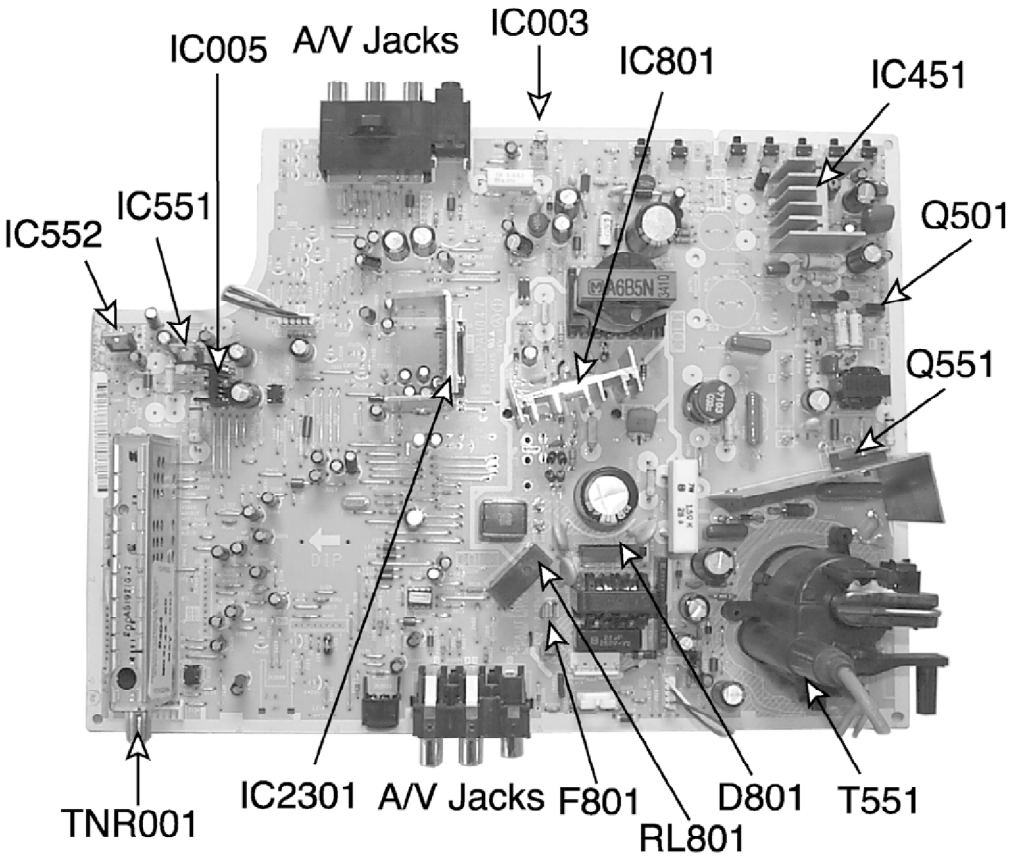

13.1.3. A-Board Surface-mounted components

A-Board (bottom view)

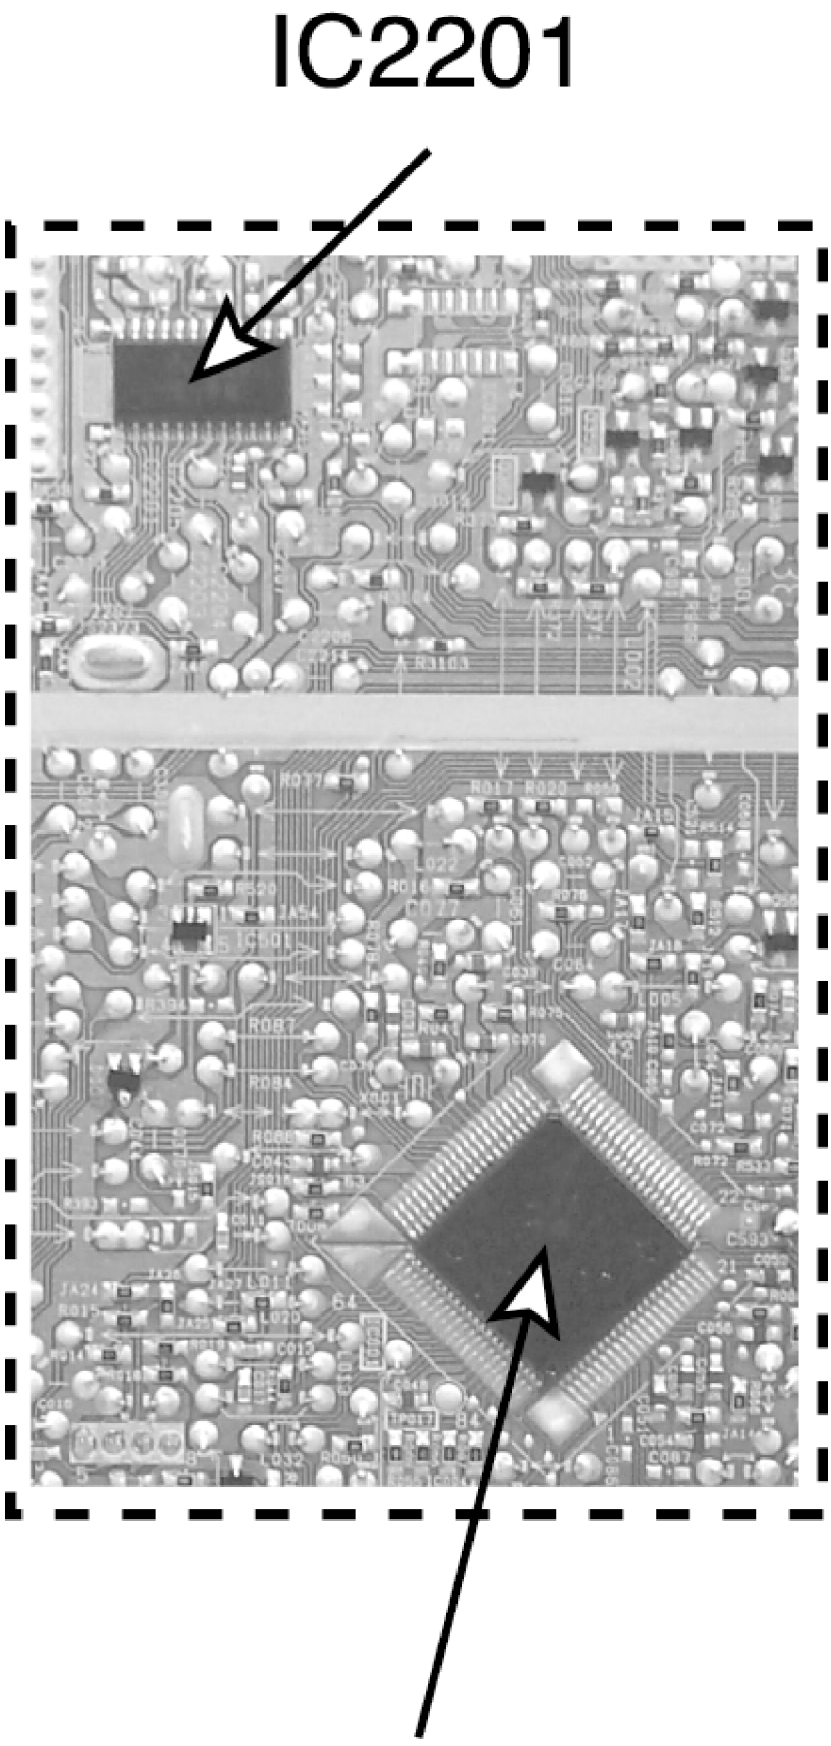
IC2201

IC001

14. Reference for PDF Colors

DESCRIPTION OF PDF LINK COLORS	
TYPE	DESTINATION
SCHEMATIC	
YELLOW ON IC	IC ON PCB
YELLOW ON CONNECTOR	CONNECTOR ON PCB
YELLOW ON SCHEMATIC	PCB
CYAN	WAVEFORM
GREEN ON SIDE	SCHEMATIC CONTINUED
GREEN ON CONNECTOR	CONNECTOR CONNECTION
BLUE ON IC	VOLTAGE
PCB	
BLUE ON IC	IC ON SCHEMATIC
BLUE ON CONNECTOR	CONNECTOR ON SCHEMATIC
BLUE ON PCB	SCHEMATIC
GREEN ON SIDE	PCB CONTINUED
BLOCK DIAGRAMS	
GREEN ON IC	IC ON SCHEMATIC
GREEN ON SIDE	BLOCK DIAGRAM CONTINUED

15. Conductor Views

15.1. A-Board Printed Circuit (Left Side)

15.2. A-Board& C Board Printed Circuit (Right Side)

16. Block Diagrams

16.1. Video Signal Block Diagram

16.2. Audio Signal Block Diagram

17. Schematics

17.1. English Schematic Notes

Notes:

IMPORTANT SAFETY NOTICE

THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES THAT ARE IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS. WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS DESIGNATED WITH A ⚠ IN THE SCHEMATIC.

CHIP TRANSISTOR LEAD DESIGNATION



SCHEMATIC NOTES

1. Resistors are carbon 1/4W unless noted otherwise.
2. Capacitors are ceramic 50V unless noted otherwise.
3. Coil value notes is inductance in μH.
4. Test point indicated by ; Test point but no pin .
5. Components indicated with ⚠ are critical parts and replacement should be made with manufacture specified replacement parts only.
6. ▬ (**BOLD LINE**) indicates the route of B+ supply.
7. The schematic diagrams are current at the time of printing and are subject to change without notice.
8. Ground symbol ⏚ indicates **HOT GROUND CONNECTION**; ⏚ indicates COLD GROUND.

NOTE: All other component symbols are used for engineering design purposes.

VOLTAGE MEASUREMENTS

1. Voltage measurement:
   - AC input to the Receiver is 120V. NTSC (HD, 1125i & 525P when applicable) signal generator is connected to the antenna of the Receiver. (Color bar pattern of 100 IRE white and 7.5 IRE black.)
   - All Picture and Audio adjustments are set to Normalize.
     TV ANT/CABLE - (Set-Up Menu) in TV/ANT Mode
     Volume - Min.
     TV/Video SW - TV position
     Audio Mode - Stereo
   - Voltage readings are nominal and may vary ±10% on active devices. Some voltage reading will vary with signal strength and picture content.
   - Supply voltages are nominal.
2. Ground symbol ⏚ indicates ground lead connection of meter.
   Incorrect ground connection will result in erroneous readings.

CAUTION: ***Incorrect ground connection of the test equipment will result in erroneous readings.***

WAVEFORM MEASUREMENTS

1. ③ indicates waveform measurement. (Measurement can be taken at the best accessible location in common to the indicated point.)
2. Taken with an NTSC signal generator connected to the antenna terminal. (NTSC color bar pattern of 8 bars of EIA colors, 100 IRE white and 7.5 IRE black.)
3. Customer Controls (Picture/Audio Menu) are set to Normalize. Volume is set to "MIN".
4. All video and color waveforms are taken with a wideband scope and a probe with low capacitance (10 to 1). Shape and peak altitudes may vary depending on the type of Oscilloscope used and its settings.
5. Ground symbol ⏚ shown on waveform number indicates (Hot) ground lead connection of the Oscilloscope.

CAUTION: Incorrect ground connection of the test equipment will result in erroneous readings.

17.2. Notas de Esquemáticos en Español

Notas

NOTA DE SEGURIDAD

LOS DIAGRAMAS ELÉCTRICOS INCLUYEN CARACTERÍSTICAS ESPECIALES MUY IMPORTANTES PARA LA PROTECCIÓN CONTRA RAYOS-X, QUEMADURAS Y DESCARGAS ELÉCTRICAS. CUANDO SE DE SERVICIO ES IMPORTANTE USAR PARA REEMPLAZO DE COMPONENTES CRITICOS, SOLO PARTES ESPECIFICADAS POR EL FABRICANTES. LOS COMPONENTES CRITICOS ESTAN SEÑALADOS EN LOS DIAGRAMAS POR EL SIMBOLO ⚠.

IDENTIFICACIÓN DE TERMINALES PARA TRANSISTORES EN *CHIP*



NOTAS DE LOS DIAGRAMAS

1. Las Resistencias son de Carbón de 1/4W, a menos que se indique otra característica.
2. Los Capacitores son de Cerámica para 50V, a menos que se indique otra característica.
3. El valor indicado de las Bobinas es la inductancia expresada en μH.
4. Los puntos de prueba en la terminal de algún componente son indicados por ● Los puntos de prueba fuera de los componentes se indican con ●.
5. Los componentes señalados con el símbolo ⚠ son considerados componentes críticos y deben ser reemplazados sólo con las partes especificadas por el fabricante.
6. ▬ (**LINEA GRUESA**) indica las líneas de alimentación de los Voltajes B+.
7. Los diagramas eléctricos están sujetos a cambio sin previo aviso.
8. El símbolo ⏚ indica que es una conexión a **Tierra Caliente** y el símbolo ⏚ indica conexión a **Tierra Fría**.

NOTA: Los demas símbolos de componentes incluidos son usados con fines de diseño.

MEDICIÓN DE VOLTAJES

1. Medición de voltaje:
   - El voltaje de entrada al Receptor es de 120V de Corriente Alterna. Un generador de patrones con formato NTSC se conecta a la entrada de la antena. (Patrón de Barras de Colores con 100 IREs para el Blanco y 7.5 IREs para el Negro.)
   - Los ajustes de los Menus Picture y Audio se normalizan.
     En el Menú Set-Up, en la opción ANTENA, se selecciona el modo de CABLE.
     El nivel de Volumen se minimiza.
     De los modos TV y Video, seleccionar el modo TV.
     Seleccionar modo Estereo del Audio.
   - Las mediciones de los voltajes son nominales y pueden variar hasta 10% en componentes en funcionamiento. Las lecturas de los voltajes pueden variar por la potencia de la señal y el contenido de la imagen.
   - Las fuentes de voltajes son nominales.
2. El símbolo ⏚ indica el tipo de tierra que se utiliza en la conexión del medidor.

PRECAUCION: Si no se utiliza la conexión a la tierra adecuada, se obtendrán mediciones equivocadas y podría dañar el equipo de medición.

MEDICIÓN DE FORMAS DE ONDA

1. Un símbolo como (3) indica el punto para medir una señal. (La medición puede hacerse en el punto con mayor accesibilidad, siempre que sea común al indicado.)
2. Se midieron utilizando un generador con formato NTSC conectado a la terminal de la antena. (Patrón de 8 Barras de Colores EAI, formato NTSC de 100 IREs para el Blanco y 7.5 IREs para el Negro.)
3. Los ajustes de usuario de los Menus PICTURE y AUDIO se normalizaron. Posteriormente el nivel de volumen se ajusta al mínimo.
4. Las formas de onda de Video y Color fueron tomadas con un osciloscopio de banda alta y con un punta de prueba de baja capacitancia (10 a 1). La forma y amplitud de las ondas puede variar según el tipo de osciloscopio que se utilice y sus características.
5. El símbolo de tierra ⏚ que aparece junto al número de la forma de onda, indica que se utiliza conexión a **Tierra Caliente** en el extremo negativo de la punta de prueba.

PRECAUCION: Si no se utiliza la conexión a la tierra adecuada, se obtendrán mediciones equivocadas y podría dañar el equipo de medición.

17.3. A-Board Schematic TNP2AH047GA/GB (page 1 of 4)

17.4. A-Board Schematic TNP2AH047GA/GB (page 2 of 4)

17.5. A-Board Schematic TNP2AH047GA/GB (page 3 of 4)

17.6. A-Board Schematic TNP2AH047GA/GB (page 4 of 4)

17.7. Voltages

17.8. Waveforms

18. Parts Location

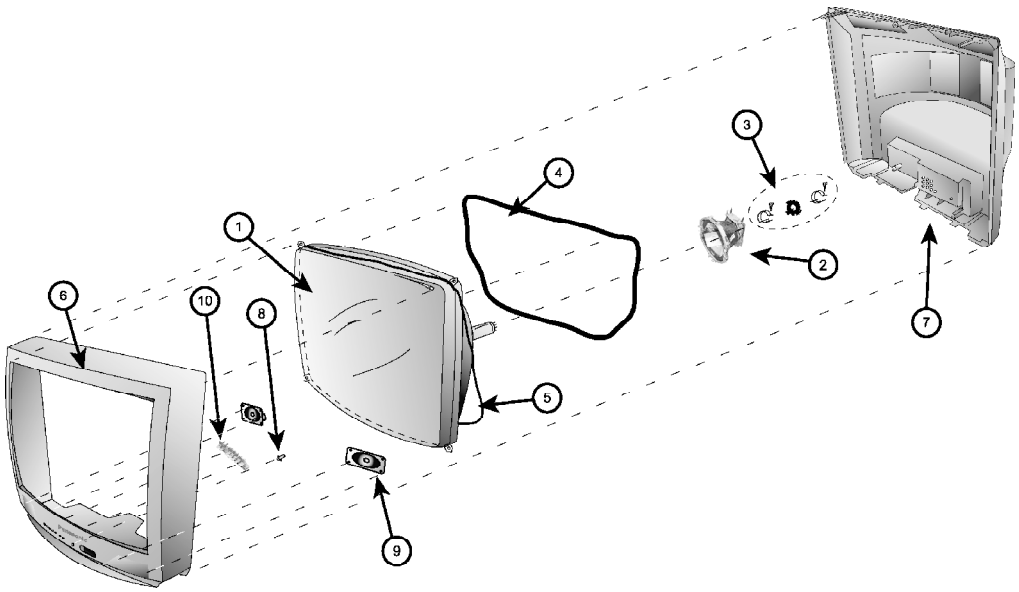

19. Parts List

19.1. Parts List Notes

Important Safety Notice

Components identified by ⚠ mark have special characteristics important for safety.
When replacing any of these components, use manufacturer's specified parts.

Abbreviation of part name and description

1. Resistor

Example :

ERD25TJ104 **C** 100KΩ, **J**, 1/4W
Type Allowance

Type	Allowance
C : Carbon	F : ± 1%
F : Fuse	G : ± 2%
M : Metal Oxide Metal Film	J : ± 5% K : ± 10%
S : Solid	M : ± 20%
W : Wire Wound	

2. Capacitor

Example :

ECKF1H103ZF **C** 0.01µF, **Z**, 50V
Type Allowance

Type	Allowance
C : Carbon	C : ± 0.25pF
E : Electrolytic	D : ± 0.5pF
P : Polyester Polypropylene	F : ± 1pF G : ± 3%
T : Tantalum	J : ± 5%
	K : ± 10%
	L : ± 15%
	M : ± 20%
	P : ± 100%, -0%
	Z : ± 80%, -20%

19.2. Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CAPRISTORS	
CRA801	TP00842-51	TAPING GAP TERMINAL	⚠
		CAPACITORS	
C003	ECA1HM4R7B	CAP E 4.7UF-50V	
C004	TCJ2VC1H150J	CAP C 15PF-J-50V	
C005	TCJ2VC1H150J	CAP C 15PF-J-50V	
C008	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C009	ECJ2VF1H104Z	CAP C .1UF-Z-50V	
C010	TCJ2VC1H680J	CAP C 68PF-J-50V	
C011	TCJ2VC1H680J	CAP C 68PF-J-50V	
C013	TCJ2VC1H680J	CAP C 68PF-J-50V	
C016	ECA1AM101B	CAP E 100UF-10V	
C017	TCJ2VC1H680J	CAP C 68PF-J-50V	
C018	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C019	ECA0JM102B	CAP E 1000UF-6.3V	
C020	ECA1CM102B	CAP E 1000UF/16V	
C021	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C031	TCJ2VC1H220J	CAP C 22PF-J-50V	
C032	ECA1AM470B	CAP E 47UF-10V	
C034	TCJ2VC1H390J	CAP C 39PF-J-50V	
C035	TCJ2VC1H120J	CAP C 12PF-J-50V	
C038	ECA1CM470B	CAP E 47UF/16V	
C039	TCJ2VB1H221K	CAP C 220PF-K-50V	
C041	ECA1HM2R2B	CAP E 2.2UF-50V	

Ref. No.	Part No.	Part Name & Description	Remarks
C043	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C044	ECA0JM102B	CAP E 1000UF-6.3V	
C046	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C048	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C051	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C052	ECA1CM101B	CAP E 100UF/16V	
C053	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C054	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C055	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C056	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C057	ECEA1CN100UB	CAP E 10UF-16V	
C058	ECEA1CN100UB	CAP E 10UF-16V	
C059	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C060	ECEA1CN220UB	CAP E 22UF-16V	
C061	ECA1HM100B	CAP E 10UF/50V	
C062	ECA1HM100B	CAP E 10UF/50V	
C063	ECJ2VF1C104Z	CAP C .1UF-Z-16V / CT-27G8G CT-27G8UG CT-27L8G CT-27L8UG	
C063	TCJ2VF1C104Z	CAP C .1UF-Z-16V / CT-27L8SG CT-27C8G	
C064	ECA1CM101B	CAP E 100UF/16V	
C066	TCJ2VC1H330J	CAP C 33PF-J-50V	
C067	TCJ2VC1H680J	CAP C 68PF-J-50V	
C068	ECA1CM100B	CAP E 10UF-16V	
C070	ECJ2VF1C104Z	CAP C .1UF-Z-16V / CT-27G8G CT-27G8UG CT-27L8G CT-27L8UG	
C070	TCJ2VF1C104Z	CAP C .1UF-Z-16V / CT-27L8SG CT-27C8G	
C071	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C072	TCJ2VB1H221K	CAP C 220PF-K-50V	
C073	TCJ2VC1H101J	CAP C 101PF-K-50V / CT-27G8G CT-27G8UG CT-27L8UG	
C077	ECA1HM100B	CAP E 10UF/50V	
C079	TCJ2VC1H220J	CAP C 22PF-J-50V	
C083	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C085	ECJ2VB1C104K	CAP C .1UF-K-16V / CT-27G8G CT-27G8UG CT-27L8G CT-27L8UG	
C085	TCJ2VB1C104K	CAP C .1UF-K-16V / CT-27L8SG CT-27C8G	
C350	ECA1CM101B	CAP E 100UF/16V	
C351	TCJ2VC1H331J	CAP C 330PF-J-50V	
C352	TCJ2VC1H331J	CAP C 330PF-J-50V	
C353	TCJ2VC1H331J	CAP C 330PF-J-50V	
C354	ECKW3D102KBN	CAP C .001UF-K-2KVDC	
C357	EEANA1E1R0B	CAP E 1.0UF-25V	
C359	ECA1CM471B	CAP E 470UF-16V	
C360	ECA1HM4R7B	CAP E 4.7UF-50V	
C403	ECEA1CN220UB	CAP E 22UF-16V	
C411	ECQB1H683JF3	CAP P .068UF-J-50V	
C451	ECA1HM2R2B	CAP E 2.2UF-50V	
C452	ECA1CM220B	CAP E 22UF-16V	
C454	ECA1VHG101B	CAP E 100UF-35V	
C455	ECA1EM102E	CAP E 1000UF-25V	
C458	ECA1HM010B	CAP E 1UF-50V	
C459	ECA1VHG471E	CAP E 470UF-35V	
C460	ECQB1224KF3	CAP P .22UF-K-100V	
C461	ECQB1104JF3	CAP P .10UF-J-100V	
C462	ECJ2VF1H103Z	CAP C .01UF-Z-50V	
C505	ECQB1H104JF3	CAP P .10UF-J-50V	
C506	ECKR2H102KB5	CAP C 1000PF-K-500V	
C510	ECCR2H100D5	CAP C 10PF-D-500V	

Ref. No.	Part No.	Part Name & Description	Remarks
C512	ECA2CM100B	CAP E 10UF-160V	
C531	ECA1HM4R7B	CAP E 4.7UF-50V	⚠
C540	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C551	ECA1VHG471B	CAP E 470UF-35V	⚠
C554	ECKR2H561KB5	CAP C 560PF-K-500V	
C555	ECA2EM220E	CAP E 22UF-250V	⚠
C556	ECA1CM471B	CAP E 470UF-16V	⚠
C557	ECKR2H102KB5	CAP C 1000PF-K-500V	
C560	ECEA1HN010UB	CAP E 1UF/50V	
C561	ECEA1HN010UB	CAP E 1UF/50V	
C562	ECKR2H561KB5	CAP C 560PF-K-500V	
C563	ECWH20622JVB	CAP P 6200PF-J-2KV	
C564	ECWH20752JVB	CAP P 7500PF-J-2KV	
C565	ECKW3D471JBP	CAP C 470PF-J-2KV	
C566	ECKW3D181JBP	CAP C 180PF-J-2KV	⚠
C568	ECWF2224JBB	CAP P .22UF-J-200V	⚠
C569	ECWF2474JSR	CAP P .47UF-J-200V	⚠
C570	ECA1CM221B	CAP E 10UF-16V	
C571	ECA1CM220B	CAP E 22UF-16V	
C572	ECA0JM221B	CAP E 220UF-6.3V	
C573	ECA1CM101B	CAP E 100UF/16V	
C575	ECKR2H471KB5	CAP C 470PF-K-500V	
C593	ECA1CM470B	CAP E 47UF/16V	
C605	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C606	ECA0JM221B	CAP E 220UF-6.3V	
C800	ECKR3A152KBP	CAP C 1500PF-K-1KVDC	
C801	ECKWAE472ZED	CAP C 4700PF-Z-500V	⚠
C802	ECKWAE472ZED	CAP C 4700PF-Z-500V	⚠
C803	ECKWAE472ZED	CAP C 4700PF-Z-500V	⚠
C805	EC0S2DA331BB	CAP E 330UF/200V	⚠
C806	ECQM4103KZW	CAP P .01UF-K-400V	
C808	ECA1HM470B	CAP E 47UF-50V	
C809	ECKR2H152KB5	CAP C .0015UF-K-500V	
C810	ECKR1H471KB5	CAP C 470PF-K-50V	
C812	ECQU2A224MVA	CAP P .22UF-M-250VAC	⚠
C813	ECQU2A153MVA	CAP P .015UF-M-250VAC	⚠
C814	ECQU2A153MVA	CAP P .015UF-M-250VAC	⚠
C820	ECA1CM101B	CAP E 100UF/16V	
C821	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
C822	ECKR3A221KBP	CAP C 220PF-K-1KV	
C823	ECA1VM471B	CAP E 470UF-35V	⚠
C824	ECKR3A102KBP	CAP C 1000PF-K-1KV	
C825	EEUMG2C221S	CAP E 220UF-160V	⚠
C826	ECKR3A471KBP	CAP C 470PF-K-1KV	
C827	ECA1CM102B	CAP E 1000UF/16V	
C828	ECA2CHG470E	CAP E 47UF-160V	
C829	ECA1CM471B	CAP E 470UF-16V	
C830	ECA1CM471B	CAP E 470UF-16V	
C2201	ECA1HM4R7B	CAP E 4.7UF-50V	

Ref. No.	Part No.	Part Name & Description	Remarks
C2202	ECA1HM2R2B	CAP E 2.2UF-50V	
C2203	ECA1HM4R7B	CAP E 4.7UF-50V	
C2204	AP106K016CAE	CAP T 10UF/16V	
C2205	ECA1HMR33B	CAP E .33UF-50V	
C2206	ECQB1H223JF3	CAP P .022UF-J-50V	
C2207	AP335K016CAE	CAP T 3.3UF/16V	
C2208	ECJ2VB1C104K	CAP C .1UF-K-16V / CT-27G8G CT-27G8UG CT-27L8G CT-27L8UG	
C2208	TCJ2VB1C104K	CAP C .1UF-K-16V / CT-27L8SG CT-27C8G	
C2209	ECJ2VB1C104K	CAP C .1UF-K-16V CT-27G8G CT-27G8UG CT-27L8G CT-27L8UG	
C2209	TCJ2VB1C104K	CAP C .1UF-K-16V / CT-27L8SG CT-27C8G	
C2210	ECJ2VB1C104K	CAP C .1UF-K-16V CT-27G8G / CT-27G8UG CT-27L8G CT-27L8UG	
C2210	TCJ2VB1C104K	CAP C .1UF-K-16V / CT-27L8SG CT-27C8G	
C2212	ECQB1H473JF3	CAP P .047UF-J-50V	
C2213	ECA1HMR47B	CAP E .47UF-50V	
C2214	ECA1AM101B	CAP E 100UF-10V	
C2215	EEANA1E100B	CAP E 10UF-25V	
C2216	TCJ2VC1H100D	CAP C 10PF-J-50V	
C2217	ECJ2VB1H102K	CAP C .001UF-K-50V	
C2218	ECJ2VB1H102K	CAP C .001UF-K-50V	
C2219	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C2220	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C2301	ECA1EM102E	CAP E 1000UF-25V	
C2302	ECA1HM010B	CAP E 1UF-50V	
C2304	ECA1CM101B	CAP E 100UF/16V	
C2307	ECA1CM102B	CAP E 1000UF/16V	
C2312	ECA1HM010B	CAP E 1UF-50V	
C2313	ECA1EM220B	CAP E 22UF-25V	
C2317	ECA1CM102B	CAP E 1000UF/16V	
C2350	ECA1CM101B	CAP E 100UF/16V	
C2520	ECJ2VF1H103V	CAP C .010UF-V-50V	
C3001	ECA1CM220B	CAP E 22UF-16V	
C3002	ECA1CM220B	CAP E 22UF-16V	
C3011	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C3012	ECA1HM010B	CAP E 1UF-50V	
C3013	ECA1CM100B	CAP E 10UF-16V	
C3014	ECA1CM100B	CAP E 10UF-16V	
C3018	ECA1HM010B	CAP E 1UF-50V	
C3019	ECJ2VF1C105Z	CAP C 1.0UF-Z-16V	
C3025	ECA1HM100B	CAP E 10UF/50V	
C3234	ECA1CM470B	CAP E 47UF/16V	
C3240	TCJ2VF1H103Z	CAP C .01UF-Z-50V	
		DIODES	
D001	MAZ30680ML	DIODE	
D002	MA2C165001VT	DIODE	
D003	MAZ30510HL	DIODE SILICON	
D006	MAZ33000HL	DIODE	
D007	MAZ30510HL	DIODE SILICON	
D010	MAZ40510MF	DIODE ZENER	
D055	MAZ40330MF	DIODE ZENER	
D360	MA2C165001VT	DIODE	
D380	MA2C029WBF	DIODE	
D451	B0EAKL000008	DIODE RECTIFIER	
D452	MA2C165001VT	DIODE	
D505	D1NL40V70	DIODE	

Ref. No.	Part No.	Part Name & Description	Remarks
D531	MA2C165001VT	DIODE	⚠
D551	B0HAMM000072	DIODE FAST RECOVERY	⚠
D554	AU02V0	DIODE	⚠
D556	MA2C165001VT	DIODE	
D557	MAZ40270LF	DIODE ZENER	
D558	B0HANV000008	DIODE	
D559	EU2	DIODE	
D561	AU02V0	DIODE	⚠
D606	MA2C165001VT	DIODE	
D801	D3SBA60-4103	DIODE	⚠
D803	MAZ41200MF	DIODE ZENER	
D806	TAP2AA0003	PTC 3-OHM	⚠
D808	SARS01V1	DIODE	
D809	B0HAJP000015	DIODE	
D810	B0HAJP000015	DIODE	
D811	B0HAJP000015	DIODE	
D820	MA2C165001VT	DIODE	
D821	MAZ40470HF	DIODE ZENER	
D822	B0HAMM000103	DIODE	
D823	S3L60P154004	DIODE	⚠
D824	B0HAMM000072	DIODE FAST RECOVERY	
D2302	MAZ43000MF	DIODE ZENER	
D2305	CVS20A120MTA	DIODE	
D2307	CVS20A120MTA	DIODE	
D2350	MAZ40680MF	DIODE ZENER	
D2353	MA2C165001VT	DIODE	
D2355	MAZ30510HL	DIODE SILICON	
D3001	MAZ40510MF	DIODE ZENER	
D3004	CVS20A120MTA	DIODE	
D3005	CVS20A120MTA	DIODE	
D3007	MAZ31100ML	DIODE ZENER	
D3008	MAZ31100ML	DIODE ZENER	
D3009	MAZ31100ML	DIODE ZENER	
D3010	MAZ31100ML	DIODE ZENER	
D3011	MAZ31100ML	DIODE ZENER	
D3012	MAZ31100ML	DIODE ZENER	
D3017	MAZ31100ML	DIODE ZENER	
D3018	MAZ31100ML	DIODE ZENER	
D3019	CVS20A120MTA	DIODE	
D3021	CVS20A120MTA	DIODE	
D3023	MAZ31100ML	DIODE ZENER	
D3024	MAZ31100ML	DIODE ZENER	
FUSES			
F801	XBA2A00101	FUSE 6.3A 125V	⚠
INTEGRATED CIRCUITS			
IC001	MN101E03GTB3	MPU	
IC002	TVR2AJ165S	EEPROM / CT-27G8G CT-27G8UG	
IC002	TVR2AJ166S	EEPROM / CT-27L8G CT-27L8UG CT-27L8SG / CT-27C8G	
IC003	GP1UE282GK	IR SENSOR	
IC004	PST9128NR	RESET	
IC005	PQ3RD13	3.3V STBY REGULATOR	

Ref. No.	Part No.	Part Name & Description	Remarks
IC451	AN5522	VERTICAL OUTPUT AMPLIFIER	
IC501	NC7SZU04M5X	H-DRIVE INVERTER	
IC551	AN78M09LB	9V VOLTAGE REGULATOR	
IC552	AN78M05LB	5V VOLTAGE REGULATOR	
IC801	STRW5634	MAIN POWER SUPPLY	⚠
IC802	0N3171RLF	OPTO-COUPLER	⚠
IC2201	AN5829S-E1V	MTS	
IC2301	AN17807A	AUDIO AMPLIFIER	
IC3001	MM1114XFBE	VIDEO SWITCH	
COILS			
L002	EXCELSA39V	FERRITE BEAD	
L003	EXCELDR35V	FERRITE BEAD	
L005	EXCELSA35V	FERRITE BEAD	
L006	EXCELSA35T	FERRITE BEAD	
L007	ELESN330JA	COIL PEAKING 33UH	
L008	G0C470KA0029	COIL PEAKING 47UH	
L010	G0C2R2KA0029	COIL PEAKING 2.2UH	
L011	EXCELSA26T	FERRITE BEAD	
L012	G0C2R2KA0029	COIL PEAKING 2.2UH	
L013	EXCELSA26T	FERRITE BEAD	
L014	ELESN180KA	COIL PEAKING 18UH	
L015	ELESN3R3JA	COIL PEAKING 3.3UH	
L020	EXCELSA26T	FERRITE BEAD	
L032	EXCELSA26T	FERRITE BEAD	
L108	EXCELSA35V	FERRITE BEAD	
L110	G0C101KA0021	COIL PEAKING 100UH / CT-27G8G CT-27G8UG CT-27L8G CT-27L8UG	
L148	EXCELSA35T	FERRITE BEAD	
L245	EXCELSA35V	FERRITE BEAD	
L312	EXCELSA24T	FERRITE BEAD	
L551	ELH5L7103	COIL	⚠
L552	EXCELSA39V	FERRITE BEAD	
L801	ELF21V018A	COIL	
L802	TALL08T470KA	COIL	
L803	TALL08T680KA	COIL	
L804	EXCELDR35V	FERRITE BEAD	
L805	EXCELDR35V	FERRITE BEAD	
L806	EXCELDR35V	FERRITE BEAD	
L807	EXCELSA35V	FERRITE BEAD	
L808	EXCELSA35V	FERRITE BEAD	
L2301	EXCELDR35V	FERRITE BEAD / CT-27L8G CT-27L8UG CT-27L8SG CT-27C8G	
L2301	EXCELSA35V	FERRITE BEAD	
L2305	EXCELSA35V	FERRITE BEAD	
TRANSISTORS			
Q001	2SD601ARTX	TRANSISTOR	
Q070	2SD601ARTX	TRANSISTOR	
Q092	2SB709ARTX	TRANSISTOR	
Q351	2SC3063RL	TRANSISTOR	
Q352	2SC3063RL	TRANSISTOR	
Q353	2SC3063RL	TRANSISTOR	
Q354	2SD601ARTX	TRANSISTOR	
Q355	2SD601ARTX	TRANSISTOR	
Q356	2SD601ARTX	TRANSISTOR	

Ref. No.	Part No.	Part Name & Description	Remarks
Q357	2SD601ARTX	TRANSISTOR	
Q358	2SD601ARTX	TRANSISTOR	
Q359	2SD601ARTX	TRANSISTOR	
Q360	2SB709ARTX	TRANSISTOR	
Q361	2SB709ARTX	TRANSISTOR	
Q362	2SB709ARTX	TRANSISTOR	
Q411	2SB0710AQL	TRANSISTOR	
Q412	2SD0602AQL	TRANSISTOR	
Q451	2SB709ARTX	TRANSISTOR	
Q501	2SC4212HLB	TRANSISTOR	
Q551	2SC5902000LK	TRANSISTOR	⚠
Q560	2SB709ARTX	TRANSISTOR	
Q605	2SB709ARTX	TRANSISTOR	
Q606	2SD601ARTX	TRANSISTOR	
Q801	2SD601ARTX	TRANSISTOR	
Q802	2SD601ARTX	TRANSISTOR	
Q820	2SA1767QTA	TRANSISTOR	
Q830	2SB1011QRL	TRANSISTOR	
Q831	2SC1473ATA	TRANSISTOR	
Q2350	2SB709ARTX	TRANSISTOR	
Q3001	2SD601ARTX	TRANSISTOR	
Q3002	2SD601ARTX	TRANSISTOR	
		RELAYS	
RL801	K6B1AGA00042	RELAY	⚠
		RESISTORS	
R001	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R004	ERJ6GEYJ562V	RES M 5.6K-J-1/10W	
R005	ERJ6GEYJ471V	RES M 470-J-1/10W	
R007	ERJ6GEYJ471V	RES M 470-J-1/10W	
R008	ERJ6GEYJ223V	RES M 22K-J-1/10W	
R009	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R014	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R015	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R016	ERJ6GEYJ221V	RES M 220-J-1/10W	
R017	ERJ6GEYJ221V	RES M 220-J-1/10W	
R018	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R019	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R020	ERJ6GEYJ221V	RES M 220-J-1/10W	
R021	ERJ6GEYJ101V	RES M 100-J-1/10W	
R022	ERJ6GEYJ101V	RES M 100-J-1/10W	
R023	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R024	ERJ6GEYJ101V	RES M 100-J-1/10W	
R025	ERJ6GEYJ101V	RES M 100-J-1/10W	
R026	ERDS1FJ561P	RES C 560-J-1/2W	
R032	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R033	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R034	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R035	ERJ6GEYJ332V	RES M 3.3K-J-1/10W	
R036	ERJ6GEYJ512V	RES M 5.1K-J-1/10W	
R037	ERJ6GEYJ912V	RES M 9.1K-J-1/10W	
R038	ERJ6GEYJ223V	RES M 22K-J-1/10W	
R039	ERDS2TJ102T	RES C 1K-J-1/4W	
R040	ERJ6GEYJ680V	RES M 68-J-1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R041	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R042	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R043	ERJ6GEYJ153V	RES M 15K-J-1/10W	
R044	ERJ6GEYJ101V	RES M 100-J-1/10W	
R045	ERDS2TJ101T	RES C 100-J-1/4W	
R046	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R047	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R048	ERJ6GEYJ101V	RES M 100-J-1/10W	
R050	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R052	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R053	ERJ6GEYJ101V	RES M 100-J-1/10W	
R055	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R056	ERJ6GEYJ471V	RES M 470-J-1/10W	
R057	ERJ6GEYJ101V	RES M 100-J-1/10W	
R060	ERJ6GEYJ101V	RES M 100-J-1/10W	
R061	ERJ6GEYJ221V	RES M 220-J-1/10W	
R062	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R063	ERDS2TJ101T	RES C 100-J-1/4W	
R064	ERJ6GEYJ473V	RES M 47K-J-1/10W	
R065	ERDS2TJ101T	RES C 100-J-1/4W	
R066	ERJ6GEYJ223V	RES M 22K-J-1/10W	
R067	ERJ6GEYJ223V	RES M 22K-J-1/10W	
R068	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R069	ERJ6GEYJ123V	RES M 12K-J-1/10W	
R070	ERJ6GEYJ561V	RES M 560-J-1/10W	
R071	ERJ6GEYJ680V	RES M 68-J-1/10W	
R072	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R073	ERJ6GEYJ471V	RES M 470-J-1/10W	
R074	ERJ6GEYJ471V	RES M 470-J-1/10W	
R075	ERJ6ENF3902V	RES M 39K-F-1/10W	
R076	ERJ6ENF6201V	RES M 6.2K-F-1/10W	
R077	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R078	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R084	ERDS2TJ182T	RES C 1.8K-J-1/4W	
R087	ERDS2TJ221T	RES C 220-J-1/4W	
R088	ERJ6GEYJ223V	RES M 22K-J-1/10W	
R092	ERJ6GEYJ473V	RES M 47K-J-1/10W	
R093	ERJ6GEYJ331V	RES M 330-J-1/10W	
R351	ERG2FJ123H	RES M 12K-J-2W	
R352	ERG2FJ123H	RES M 12K-J-2W	
R353	ERG2FJ123H	RES M 12K-J-2W	
R354	ERC12GK272C	RES C 2.7K-K-1/2W	
R355	ERC12GK272C	RES C 2.7K-K-1/2W	
R356	ERC12GK272C	RES C 2.7K-K-1/2W	
R357	ERJ6ENF3000V	RES M 300-F-1/10W	
R358	ERJ6ENF3000V	RES M 300-F-1/10W	
R359	ERJ6ENF3000V	RES M 300-F-1/10W	
R360	ERJ6ENF7500V	RES M 750-F-1/10W	
R361	ERJ6ENF7500V	RES M 750-F-1/10W	
R362	ERJ6ENF7500V	RES M 750-F-1/10W	
R363	ERJ6GEYJ101V	RES M 100-J-1/10W	
R364	ERJ6GEYJ101V	RES M 100-J-1/10W	
R365	ERJ6GEYJ101V	RES M 100-J-1/10W	
R371	ERJ6GEYJ101V	RES M 100-J-1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R372	ERJ6GEYJ101V	RES M 100-J-1/10W	
R373	ERJ6GEYJ101V	RES M 100-J-1/10W	
R374	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R375	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R376	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R377	ERJ6ENF3300V	RES M 330-F-1/10W	
R378	ERJ6ENF3300V	RES M 330-F-1/10W	
R379	ERJ6ENF3300V	RES M 330-F-1/10W	
R380	ERJ6ENF1501V	RES M 1.5K-F-1/10W	
R381	ERJ6ENF1501V	RES M 1.5K-F-1/10W	
R382	ERJ6ENF1501V	RES M 1.5K-F-1/10W	
R383	ERJ6ENF3481V	RES M 3.48K-F-1/10W	
R384	ERJ6ENF7500V	RES M 750-F-1/10W	
R385	ERDS1FJ150P	RES C 15-J-1/2W	
R389	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R390	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R391	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R411	ERJ6GEYJ682V	RES M 6.8K-J-1/10W	
R412	ERJ6GEYJ471V	RES M 470-J-1/10W	
R413	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R414	ERJ6GEYJ471V	RES M 470-J-1/10W	
R451	ERDS1FJ1R0P	RES C 1.0-J-1/2W	
R453	ERJ6GEYJ333V	RES M 33K-J-1/10W	
R454	ERJ6GEYJ363V	RES M 36K-J-1/10W	
R455	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R456	ERG3FJ151	RES M 150-J-3W	
R457	ERDS1FJ1R0P	RES C 1.0-J-1/2W	
R458	ERJ6GEYJ123V	RES M 12K-J-1/10W	
R459	ERJ6GEYJ152V	RES M 1.5K-J-1/10W	
R462	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R463	ERJ6GEYJ473V	RES M 47K-J-1/10W	
R464	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R468	ERJ6ENF1962V	RES M 19.6K-F-1/10W	
R469	ERJ6ENF5621V	RES M 5.62K-F-1/10W	
R471	ERJ6GEYJ223V	RES M 22K-J-1/10W	
R504	ERDS2TJ102T	RES C 1K-J-1/4W	
R505	ERJ6GEYJ562V	RES M 5.6K-J-1/10W	
R506	ERG1SJ562P	RES C 5.6K-J-1W	
R507	ER0S2THF1802	RES M 18K-F-1/4W	⚠
R509	ERJ6ENF1002V	RES M 10K-F-1/10W	⚠
R510	ERG3FJ562	RES M 5.6K-J-3W	⚠
R511	ERG3FJ562	RES M 5.6K-J-3W	⚠
R512	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R514	ERJ6GEYJ392V	RES M 3.9K-J-1/10W	
R520	ERJ6GEYJ471V	RES M 470-J-1/10W	
R532	ERJ6ENF2202V	RES M 22K-F-1/10W	⚠
R533	ERJ6ENF1003V	RES M 100K-F-1/10W	⚠
R540	ERJ6GEYJ105V	RES M 1M-J-1/10W	
R541	ERDS2TJ274T	RES C 27K-J-1/4W	
R542	ERJ6GEYJ124V	RES M 120K-J-1/10W	
R551	ERX12SJR47P	RES M .47-J-1/2W	⚠

Ref. No.	Part No.	Part Name & Description	Remarks
R552	ERDS1FJ1R0T	RES C 1.0-J-1/2W	⚠
R557	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R558	ERQ1CKPR56S	RES F .56-K-1W	⚠
R559	ERG2FJ683H	RES M 12K-J-2W	
R561	ERG2FJ102H	RES M 1K-J-2W	
R562	ERG2FJ270H	RES M 27-J-2W	
R563	ERG3FJ150H	RES M 15-J-3W	
R564	ERDS2TJ104T	RES C 100K-J-1/4W	
R565	ERDS2TJ393T	RES C 39K-J-1/4W	
R592	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R605	ERDS2TJ103T	RES C 10K-J-1/4W	
R606	ERJ6GEYJ562V	RES M 5.6K-J-1/10W	
R607	ERJ6GEYJ102V	RES M 1K-J-1/10W	
R608	ERJ6GEYJ104V	RES M 100K-J-1/10W	
R802	ERG2FJ104H	RES M 100K-J-2W	
R804	ERG1DJ224P	RES M 220K-J-1W	
R805	ERX2FZJR15H	RES M .18-J-2W	⚠
R806	ERX12SJ1R5P	RES M 4.5-J-1/2W	⚠
R807	ERDS2TJ681T	RES C 680-J-1/4W	
R808	ERX12SJ1R5P	RES M 1.5-J-1/2W	
R809	ERDS2TJ472T	RES C 4.7K-J-1/4	
R810	ERDS2TJ221T	RES C 220-J-1/4W	
R815	ERC12ZGK825D	RES C 8.2MEG-K-1/2W	⚠
R821	ERDS1FJ1R0T	RES C 1.0-J-1/2W	
R822	ERDS1FJ1R0T	RES C 1.0-J-1/2W	
R823	ERDS1FJ272T	RES C 2.7K-J-1/2W	
R824	ERDS2TJ223T	RES C 22K-J-1/4W	
R825	ERDS2TJ272T	RES C 2.7K-J-1/4W	
R827	ERJ6GEYJ153V	RES M 15K-J-1/10W	
R828	ERJ6GEYJ104V	RES M 100K-J-1/10W	
R829	ERJ6GEYJ104V	RES M 100K-J-1/10W	
R830	ERG2FJ273H	RES M 27K-J-2W	
R831	ERDS2TJ682T	RES C 6.8K-J-1/4W	
R832	ERJ6GEYJ122V	RES M 1.2K-J-1/10W	
R833	ERJ6GEYJ473V	RES M 47K-J-1/10W	
R834	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R837	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R838	ERJ6GEYJ103V	RES M 10K-J-1/10W	
R850	ERQ12HJR56P	RES F .56-J-1/2W	⚠
R202	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R2201	ERJ6GEYJ224V	RES M 220K-J-1/10W	
R2203	ERJ6GEYJ272V	RES M 2.7K-J-1/10W	
R2204	ERJ6GEYJ272V	RES M 2.7K-J-1/10W	
R2205	ERDS2TJ101T	RES C 100-J-1/4W	
R2206	ERDS2TJ273T	RES C 27K-J-1/4W	
R2207	ERJ6GEYJ152V	RES M 1.5K-J-1/10W	
R2208	ERJ6GEYJ152V	RES M 1.5K-J-1/10W	
R2301	ERQ2CJP5R6S	RES F 5.6-J-2W	
R2307	ERDS2TJ222T	RES C 2.2K-J-1/4W	
R2351	ERJ6GEYJ751V	RES M 750-J-1/10W	
R2352	ERJ6GEYJ152V	RES M 1.5K-J-1/10W	
R2356	ERJ6GEYJ101V	RES M 100-J-1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R2357	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R2362	ERJ6GEYJ221V	RES M 220-J-1/10W	
R2364	ERJ6ENF1001V	RES M 1K-F-1/10W	
R2370	ERJ6GEYJ222V	RES M 2.2K-J-1/10W	
R3002	ERJ6GEYJ221V	RES M 220-J-1/10W	
R3003	ERJ6GEYJ221V	RES M 220-J-1/10W	
R3004	ERDS2TJ101T	RES C 100-J-1/4W	
R3005	ERJ6GEYJ334V	RES M 330K-J-1/10W	
R3006	ERJ6GEYJ151V	RES M 150-J-1/10W	
R3007	ERJ6GEYJ151V	RES M 150-J-1/10W	
R3008	ERJ6ENF75R0V	RES M 75.0-F-1/10W	
R3009	ERJ6GEYJ682V	RES M 6.8K-J-1/10W	
R3010	ERJ6GEYJ334V	RES M 330K-J-1/10W	
R3011	ERJ6GEYJ682V	RES M 6.8K-J-1/10W	
R3012	ERDS2TJ101T	RES C 100-J-1/4W	
R3013	ERJ6ENF75R0V	RES M 75.0-F-1/10W	
R3014	ERJ6ENF75R0V	RES M 75.0-F-1/10W	
R3015	ERJ6ENF75R0V	RES M 75.0-F-1/10W	
R3016	ERDS2TJ181T	RES C 180-J-1/4W	
R3017	ERDS2TJ181T	RES C 180-J-1/4W	
R3018	ERDS2TJ101T	RES C 100-J-1/4W	
R3019	ERJ6GEYJ682V	RES M 6.8K-J-1/10W	
R3020	ERJ6GEYJ682V	RES M 6.8K-J-1/10W	
R3021	ERDS2TJ101T	RES C 100-J-1/4W	
R3022	ERDS2TJ101T	RES C 100-J-1/4W	
R3023	ERDS2TJ101T	RES C 100-J-1/4W	
R3024	ERDS2TJ101T	RES C 100-J-1/4W	
R3025	ERDS2TJ101T	RES C 100-J-1/4W	
R3026	ERDS2TJ101T	RES C 100-J-1/4W	
R3027	ERDS2TJ101T	RES C 100-J-1/4W	
R3034	ERJ6GEYJ471V	RES M 470-J-1/10W	
R3035	ERJ6GEYJ562V	RES M 5.6K-J-1/10W	
R3036	ERJ6GEYJ183V	RES M 18K-J-1/10W	
R3037	ERJ6GEYJ471V	RES M 470-J-1/10W	
R3038	ERJ6GEYJ562V	RES M 5.6K-J-1/10W	
R3039	ERJ6GEYJ183V	RES M 18K-J-1/10W	
R3041	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R3042	ERJ6GEYJ472V	RES M 4.7K-J-1/10W	
R3101	ERJ6GEYJ334V	RES M 330K-J-1/10W	
R3102	ERJ6GEYJ334V	RES M 330K-J-1/10W	
R3103	ERJ6GEYJ334V	RES M 330K-J-1/10W	
R3104	ERJ6GEYJ334V	RES M 330K-J-1/10W	
SWITCHES			
S001	EVQPF106K	SWITCH	
S002	EVQPF106K	SWITCH	
S003	EVQPF106K	SWITCH	
S004	EVQPF106K	SWITCH	
S005	EVQPF106K	SWITCH	
S008	EVQPF106K	SWITCH	
S009	EVQPF106K	SWITCH	
TRANSFORMERS			
T501	ETH19Y211AZ	TRANSFORMER	
T551	KFT4AA348F2	TRANSFORMER FLYBACK	⚠

Ref. No.	Part No.	Part Name & Description	Remarks
T801	ETS35AA6B5NC	TRANSFORMER	⚠
T3001	TF0402B04P03	TRANSFORMER	
T3002	TF0402B04P03	TRANSFORMER	
		CRYSTALS/FILTERS	
X001	A1100005BD	CRYSTAL	
		OTHERS	
TNR001	ENG36621G	TUNER	⚠
M001	TSX2AA0361	AC LINE CORD	
M002	TMW2A97121	STRAIN RELIEF FOR AC CORD / CT-27G8G CT-27G8UG CT-27L8G CT-27L8UG CT-27L8SG	
M003	TJSC00300	CRT SOCKET	⚠
1	M68LGL061XA	27 INCH CRT	⚠
2	TLY2AA031	DEFLECTION YOKE	⚠
3	JH291U-009	PURITY AND CONVERGENCE RINGS	
4	TLK2AA0011	DEGAUSSING COIL	⚠
5	TXF3A011EV	DAG GND	
M004	TMM2A30702	YOKE WEDGE	
M005	0FMK014ZZ	CONVERGENCE CORRECTOR STRIP	
M006	TSN63115-4	PURITY MAGNET	
6	TXFKY10GSER	FRONT CABINET / CT-27L8G CT-27L8UG	
	TXFKY20GSER	FRONT CABINET / CT-27C8G	
	TXFKY21GSER	FRONT CABINET / CT-27L8SG	
7	TXFKU09GSER	BACK CABINET / CT-27G8G CT-27G8UG CT-27L8G CT-27L8UG CT-27L8SG	
	TXFKU01GSER	BACK CABINET / CT-27C8G	
8	TKX2AA00401	IR SENSOR GUIDE / CT-27G8G CT-27G8UG	
	TKX2AA00404	IR SENSOR GUIDE / CT-27L8G CT-27L8UG CT-27L8SG	
	TKX2AA00407	IR SENSOR GUIDE / CT-27C8G	
9	TAS2AA0029	1.5W 16-OHM SPEAKER	
10	TBX2AA0122	7-KEY BUTTON (GRAY) / CT-27L8G CT-27L8UG CT-27L8SG	
	TBX2AA1701GS	7-KEY BUTTON / CT-27G8G CT-27G8UG	
	TBX2AA2602	7-KEY BUTTON / CT-27C8G	
JK3001	TJB2AA0221	REAR A/V JACK / CT-27L8G CT-27L8UG CT-27L8SG CT-27C8G	
JK3001	TJB2A9064B	REAR A/V JACK / CT-27G8G CT-27G8UG	
JK3002	TJB2AA0046	FRONT A/V JACK	
JK3003	TJB2AA0421	TERMINAL S-VIDEO	
		OTHER ACCESSORIES	
M007	TQB2AA0461	OWNERS MANUAL	
M008	EUR7613Z10	REMOTE CONTROL / CT-27C8G	
M009	EUR7713010	REMOTE CONTROL / CT-27G8G CT-27G8UG CT-27L8G CT-27L8UG CT-27L8SG	
M010	UR76EC0303A	REMOTE CONTROL BATTERY COVER / CT-27C8G	
M011	UR77EC1303A	REMOTE CONTROL BATTERY COVER / CT-27G8G CT-27G8UG CT-27L8G CT-27L8UG CT-27L8SG	

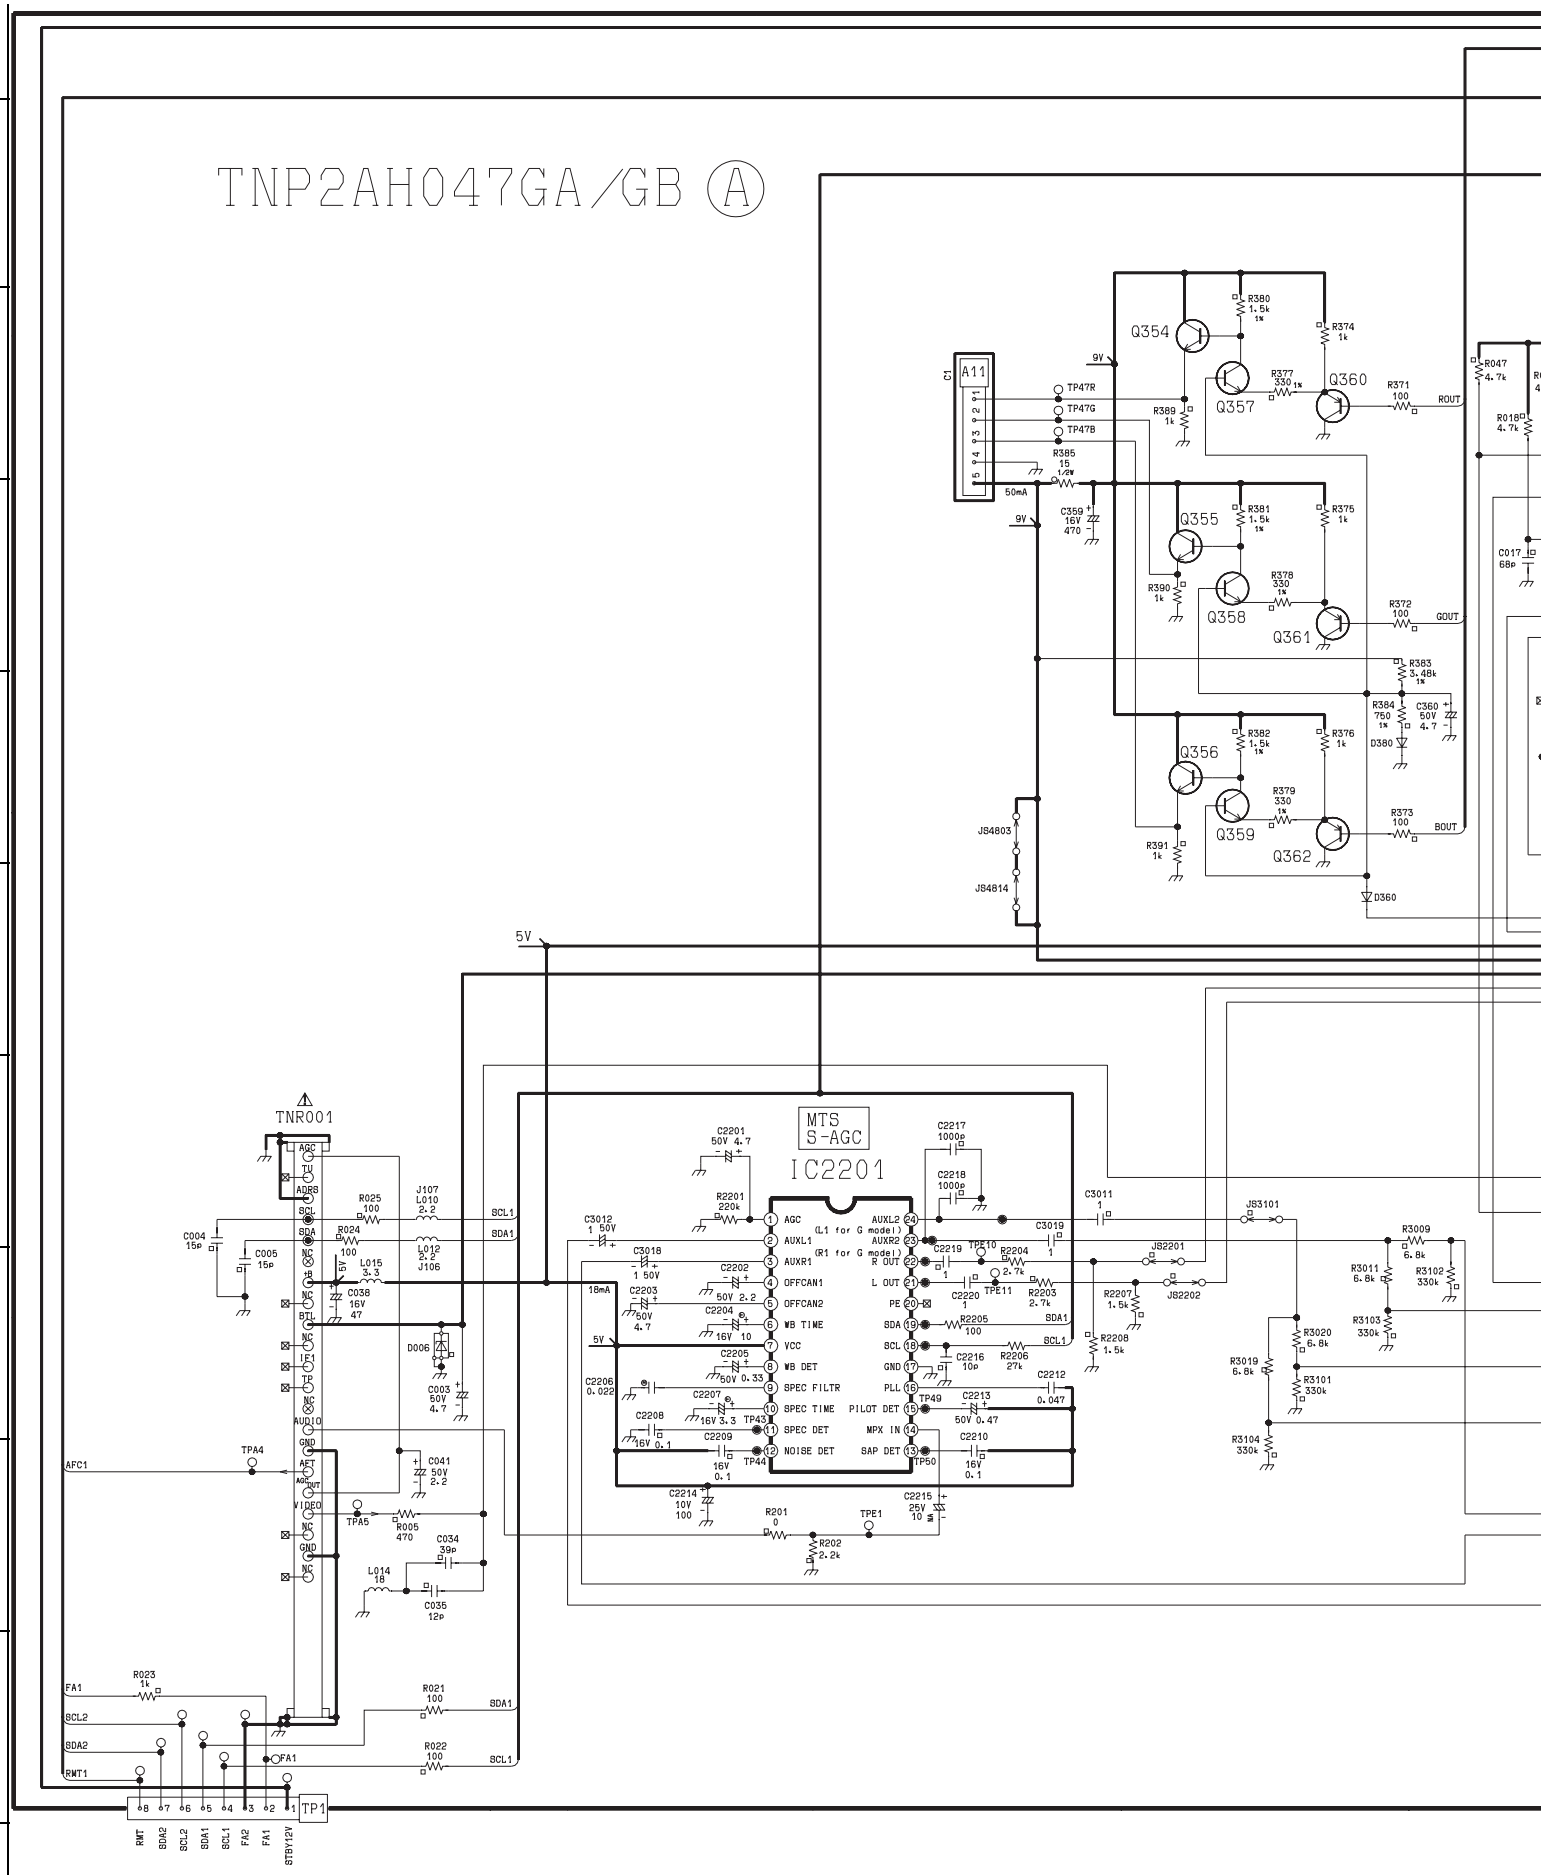
TNP2AH047GA/GB Ⓐ
A11
Q354
Q355
Q356
Q357
Q358
Q359
Q360
Q361
Q362
TP47R
TP47G
TP47B
9V
50mA
ROUT
GOUT
BOUT
D360
D380
J84803
J84814
5V
TNR001
MTS
S-AGC
IC2201
AGC
AUXL1
AUXR1
OFFCAN1
OFFCAN2
WB TIME
VCC
WB DET
SPEC FILTR
SPEC TIME
SPEC DET
NOISE DET
AUXL2
AUXR2
L OUT
PE
SDA
SCL
GND
PLL
PILOT DET
MPX IN
SAP DET
SCL1
SDA1
AFC1
FA1
SCL2
SDA2
RMT1
STBY12V
TP1
TP4
TP5
TP43
TP44
TP49
TP50
TPE1
TPE10
TPE11
JS2201
JS2202
JS3101

1	2	3	4	5	6	7	8

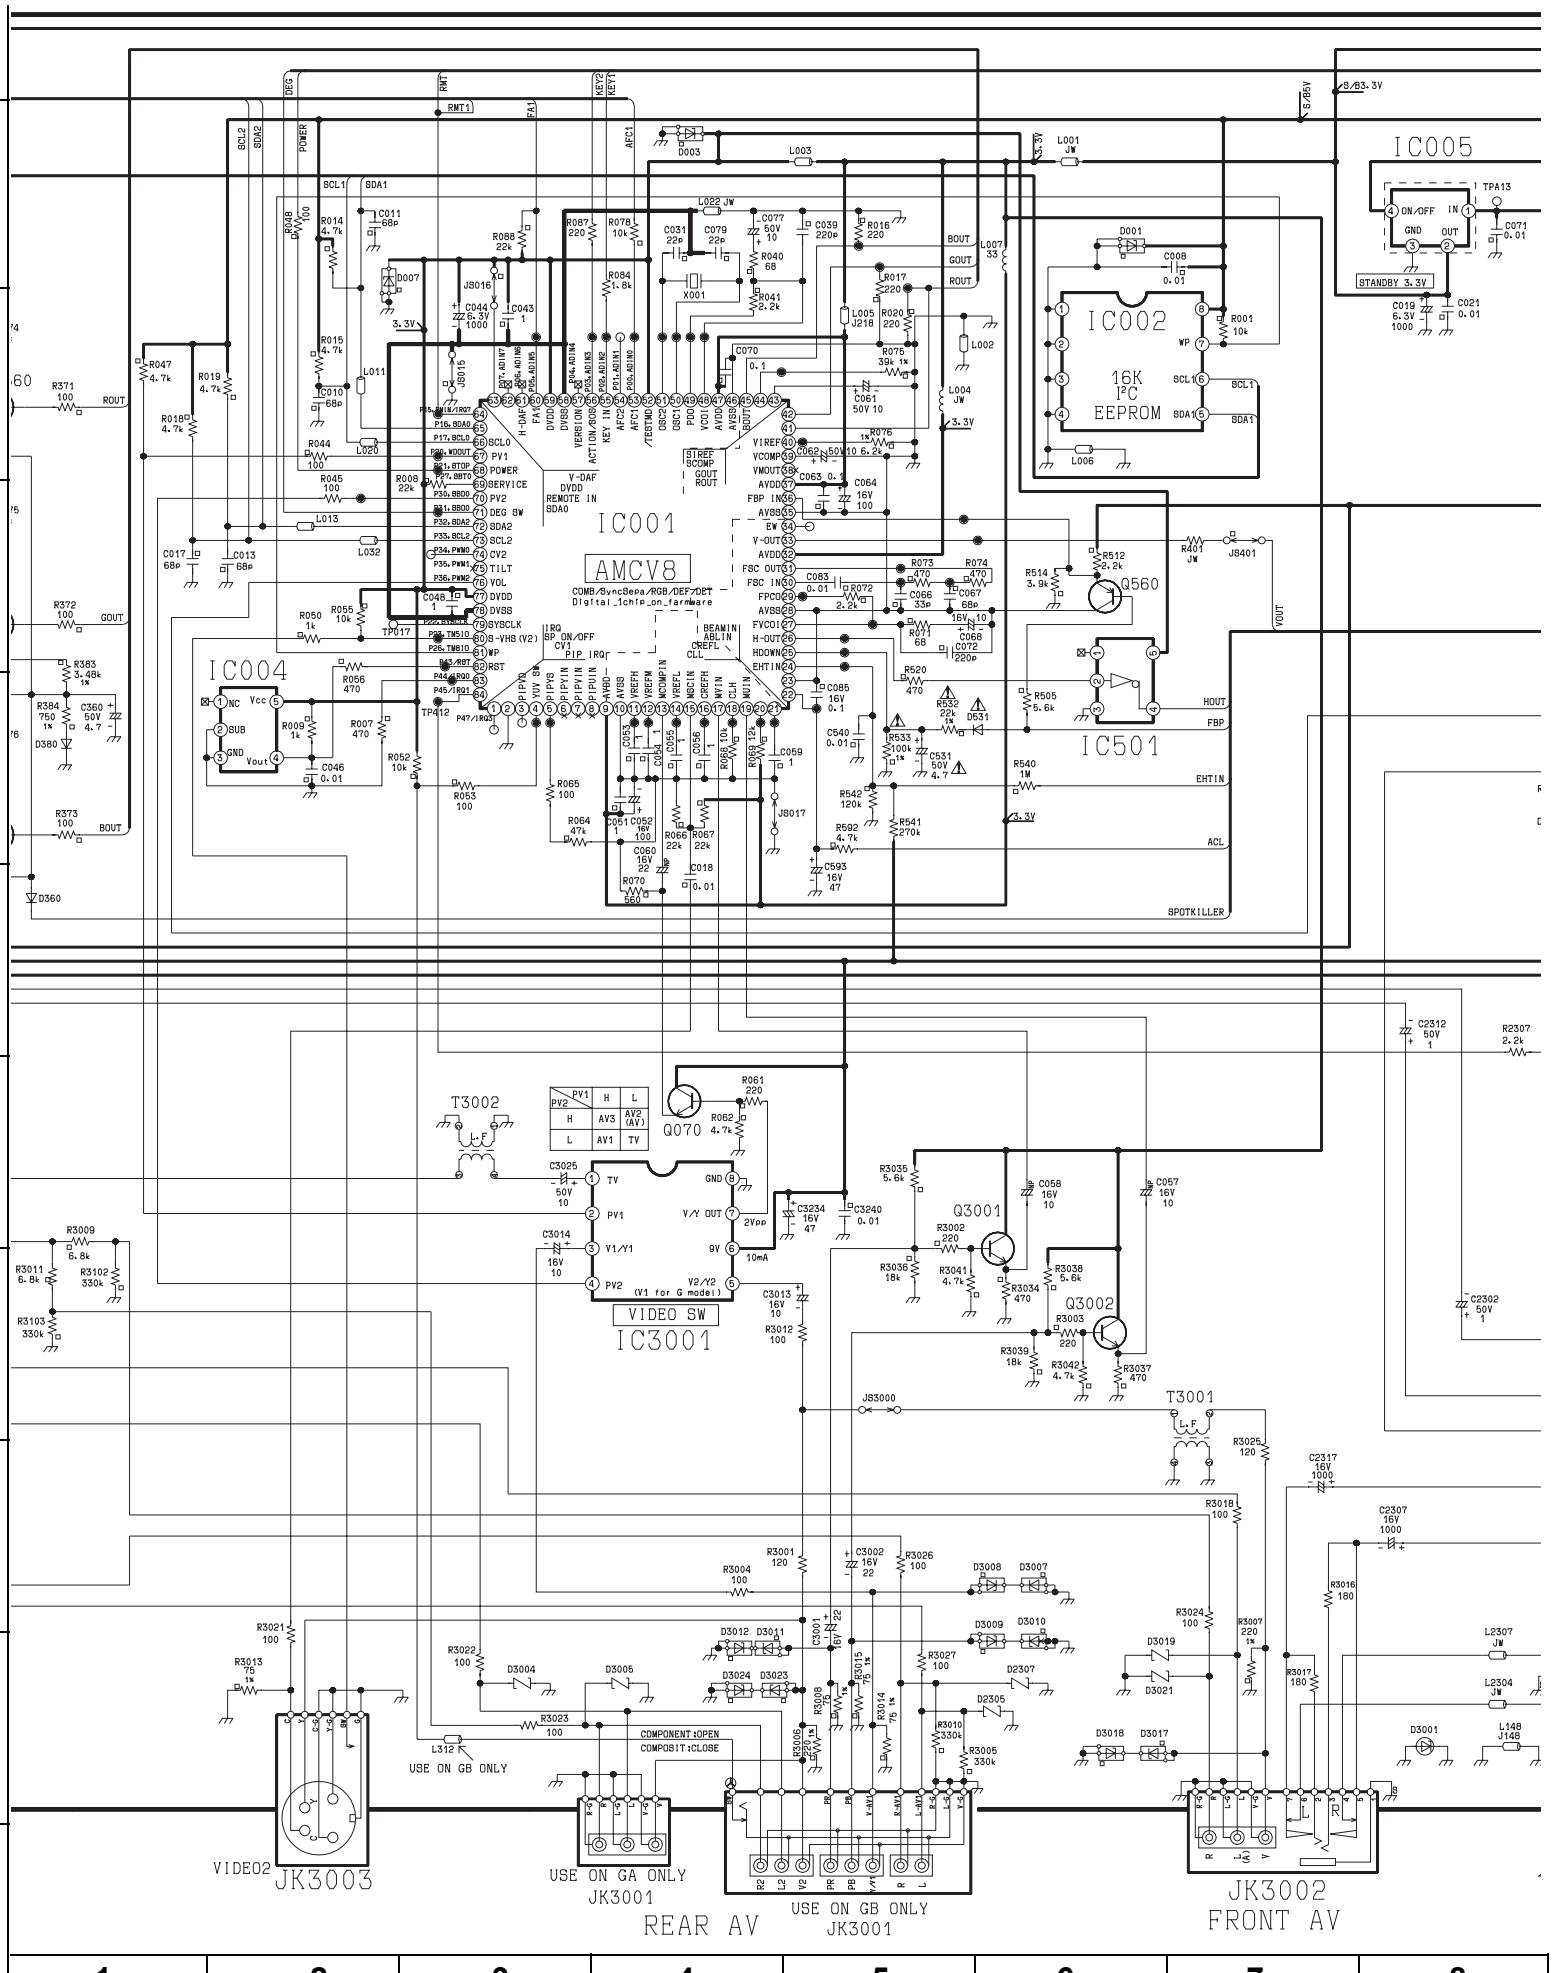
IC001
AMCV8
COMB/SyncSepa/RGB/DEF/DET
Digital_1chip_on_farmware
IC002
16K
I2C
EEPROM
IC003
IC004
IC005
IC501
Q070
Q560
Q3001
Q3002
T3002
T3001
VIDEO SW
IC3001
JK3003
VIDEO2
USE ON GA ONLY
JK3001
REAR AV
USE ON GB ONLY
JK3001
JK3002
FRONT AV
USE ON GB ONLY
COMPONENT:OPEN
COMPOSIT:CLOSE
STANDBY 3.3V
SPOTKILLER
ROUT
GOUT
BOUT
VOUT
HOUT
FBP
EHTIN
ACL
3.3V
8/B3.3V
5/B5V

1	2	3	4	5	6	7	8

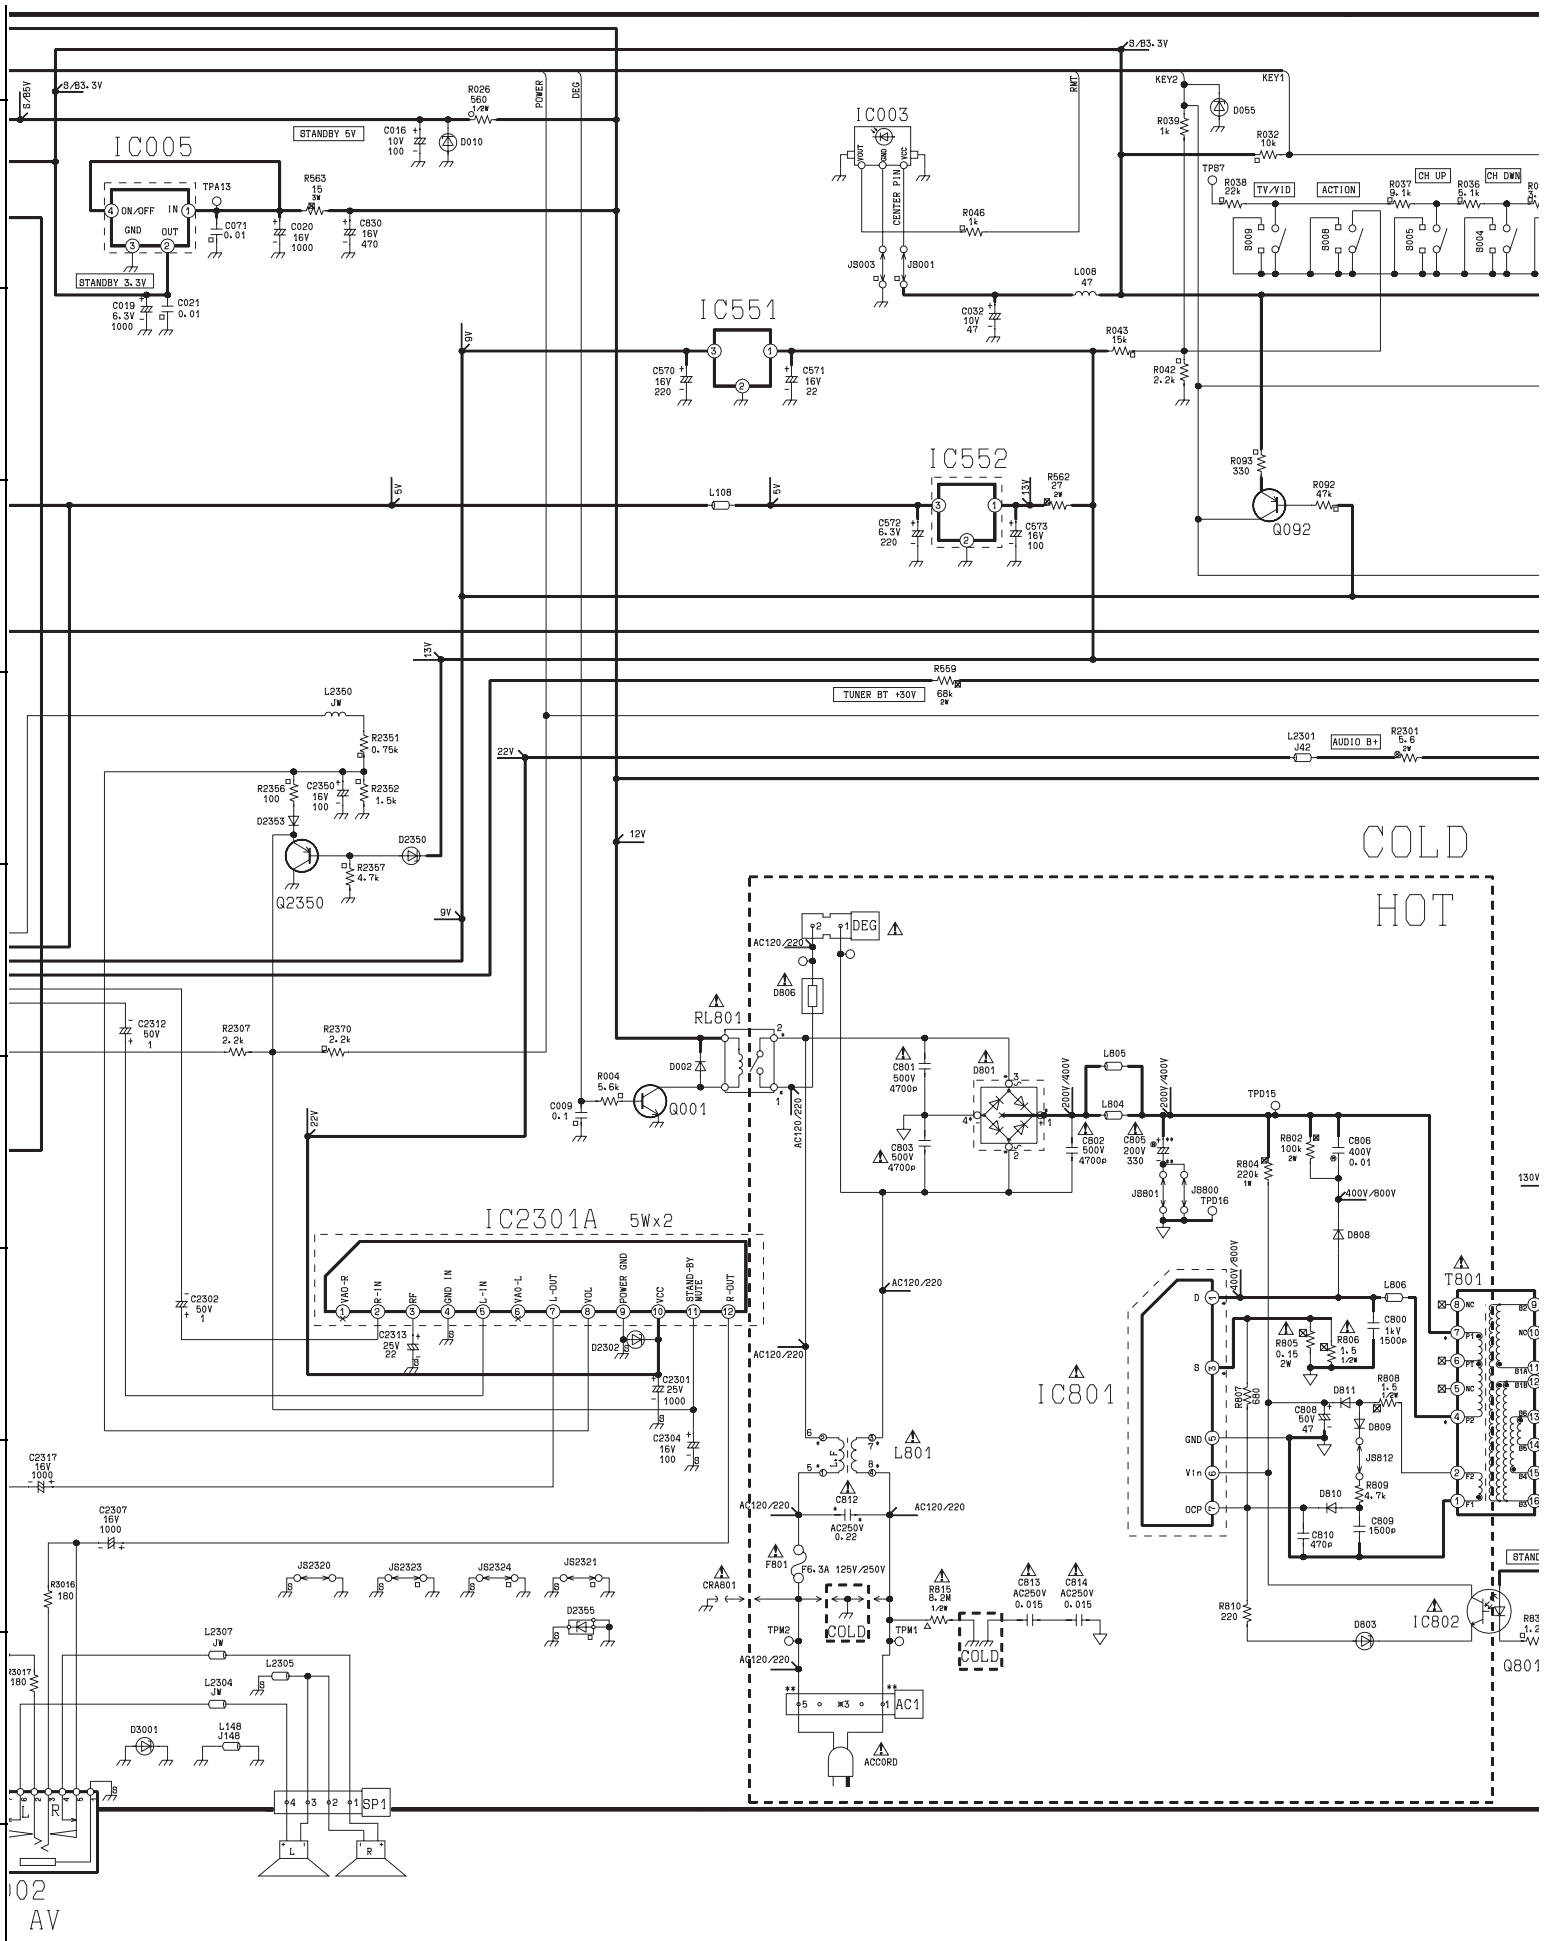
IC005
IC003
IC551
IC552
IC2301A 5Wx2
IC801
IC802
COLD
HOT
RL801
Q001
Q2350
Q092
Q801
T801
L801
L2307
L2305
L2304
L148
J148
D3001
SP1
TUNER BT +30V
AUDIO B+
STANDBY 5V
STANDBY 3.3V
TV/VID
ACTION
CH UP
CH DWN
ACCORD
AC1

1	2	3	4	5	6	7	8

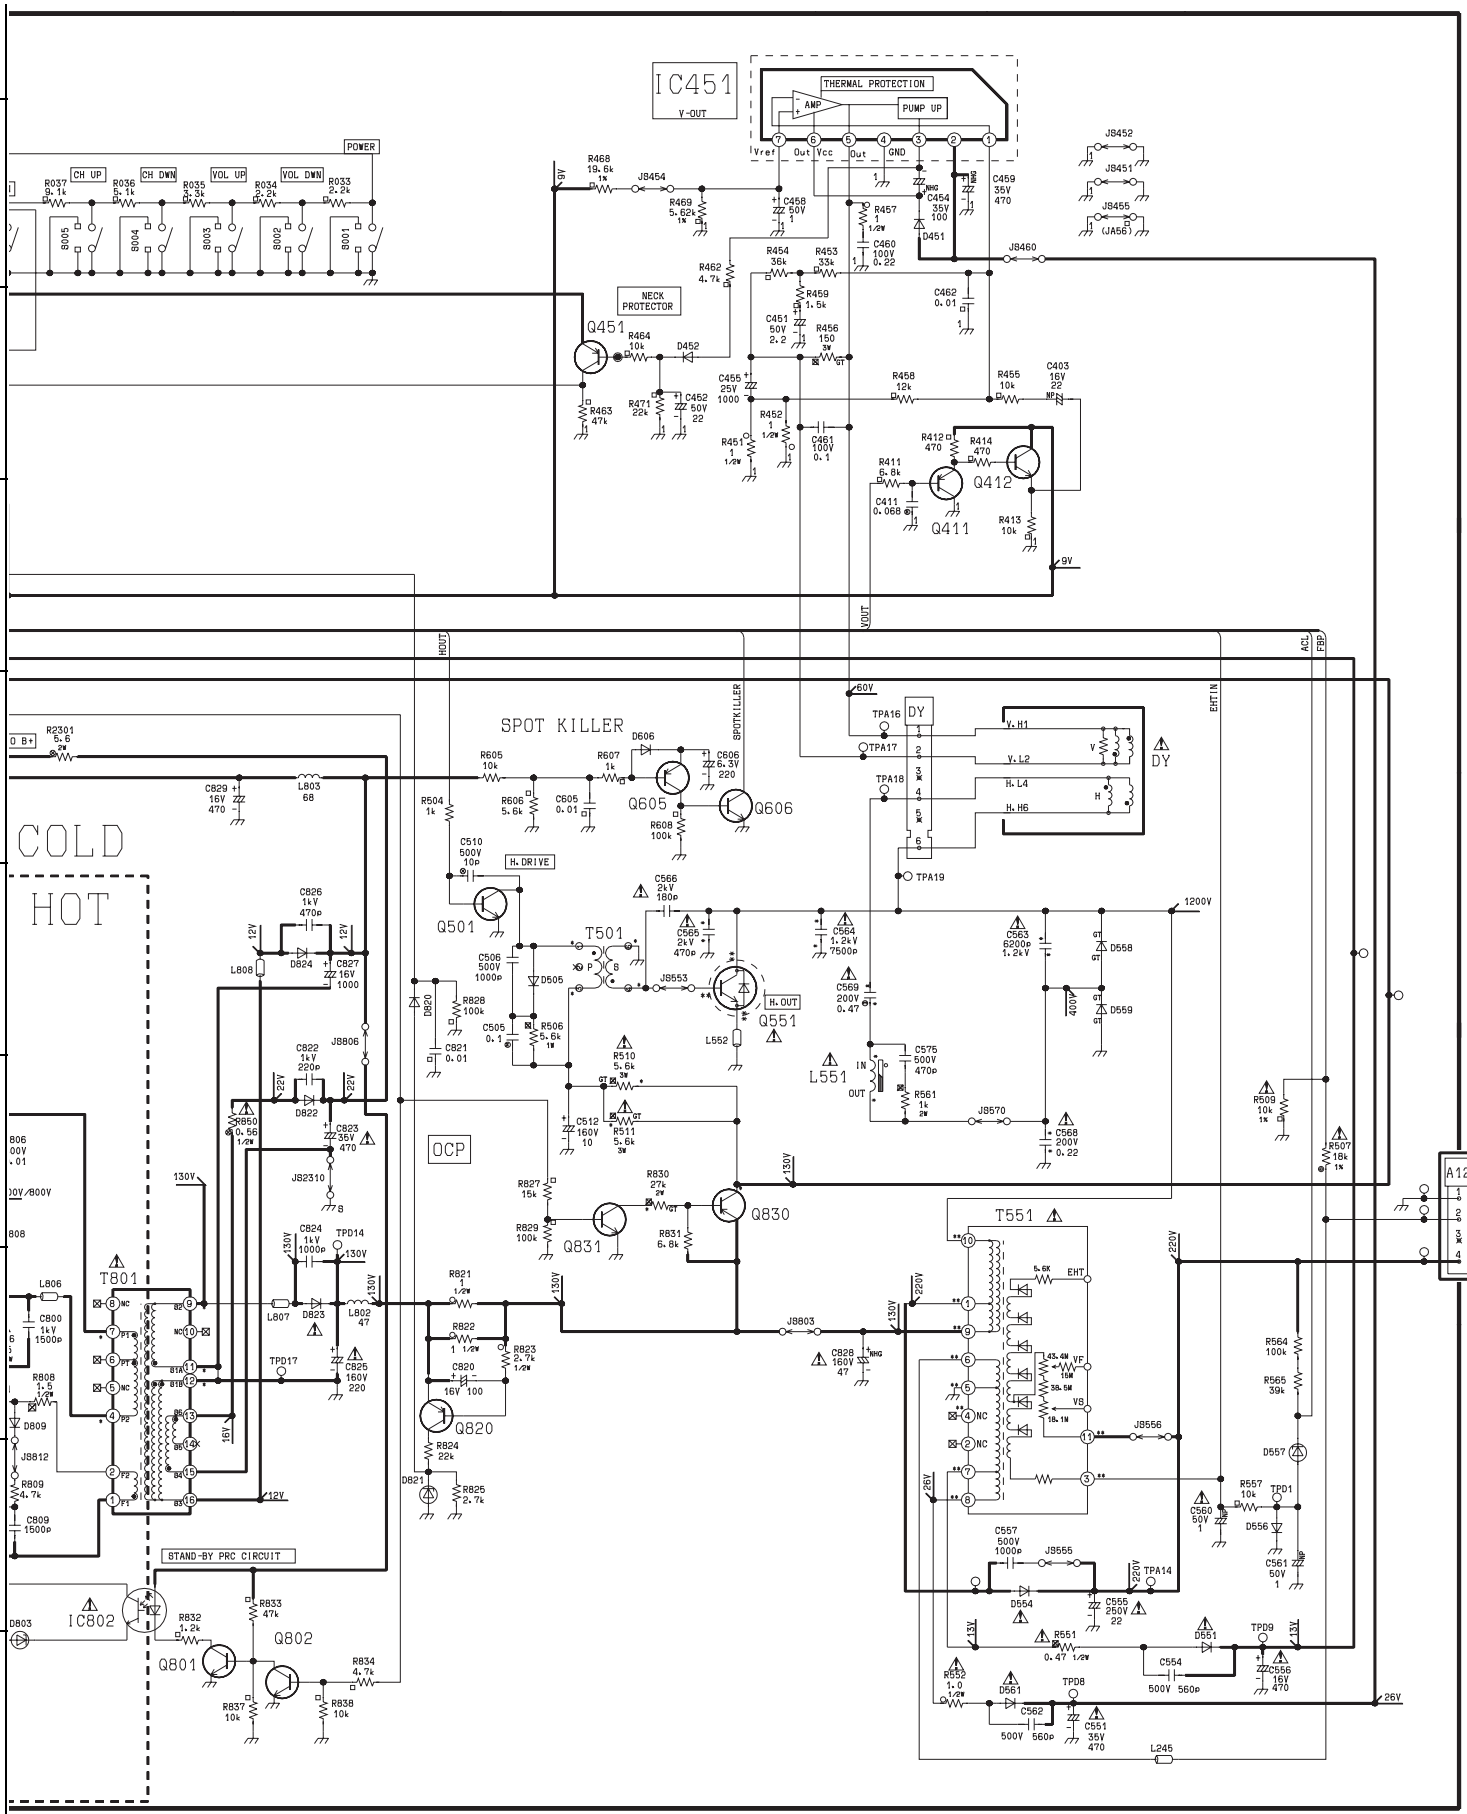
IC451
Y-OUT
THERMAL PROTECTION
PUMP UP
AMP
Vref
Out
Vcc
Out
GND
POWER
CH UP
CH DWN
VOL UP
VOL DWN
NECK PROTECTOR
SPOT KILLER
COLD
HOT
H.DRIVE
OCP
STAND-BY PRC CIRCUIT
T801
T501
T551
Q451
Q412
Q411
Q501
Q605
Q606
Q551
Q830
Q831
Q820
Q801
Q802
IC802
DY
A12
HEATER GND
HEATER
220V
1200V
130V
26V
16V
12V
9V
HOUT
VOUT
EHT/IN
ACL
FBP

1	2	3	4	5	6	7	8

A - BOARD

IC001			
1	0.00	43	2.50
2	0.00	44	1.70
3	0.00	45	0.00
4	0.00	46	0.00
5	0.00	47	3.30
6	1.20	48	1.90
7	1.20	49	1.90
8	1.30	50	1.60
9	3.30	51	1.70
10	0.00	52	3.30
11	2.70	53	1.70
12	1.50	54	1.40
13	1.40	55	3.30
14	0.40	56	1.40
15	1.60	57	0.00
16	2.20	58	0.00
17	0.07	59	3.30
18	1.70	60	3.30
19	0.00	61	3.30
20	1.40	62	0.70
21	1.00	63	3.30
22	2.60	64	3.30
23	0.00	65	3.40
24	1.90	66	3.50
25	1.90	67	0.10
26	1.40	68	3.20
27	0.00	69	0.00
28	0.00	70	0.00
29	1.30	71	0.00
30	1.80	72	5.20
31	1.00	73	5.20
32	3.30	74	0.00
33	1.70	75	0.00
34	0.80	76	0.00
35	0.00	77	3.30
36	0.60	78	0.00
37	3.30	79	0.00
38	3.30	80	3.30
39	2.30	81	5.20
40	1.70	82	3.30
41	0.40	83	0.00
42	0.40	84	3.30

IC002	
1	0.00
2	0.00
3	0.00
4	0.00
5	3.40
6	3.40
7	5.20
8	5.20

IC003	
1	0.00
2	3.31
3	3.27

IC004	
1	0.00
2	0.00
3	0.00
4	3.30
5	3.30

IC005	
1	9.10
2	3.30
3	0.00
4	9.10

IC451	
1	2.00
2	23.30
3	1.20
4	0.00
5	11.60
6	23.50
7	2.00

IC501	
1	0.00
2	1.35
3	0.00
4	1.05
5	3.30

IC551	
1	12.20
2	0.00
3	9.00

IC552	
1	7.50
2	0.00
3	5.00

IC801↓	
1	-21.00
2	N/A
3	0.10
4	N/A
5	0.00
6	32.24
7	1.50

IC802↓	
1	2.30
2	32.24

IC2201			
1	1.60	13	2.80
2	2.20	14	2.20
3	2.20	15	2.50
4	2.30	16	3.50
5	2.40	17	0.00
6	0.07	18	3.20
7	5.00	19	3.40
8	2.50	20	0.00
9	2.60	21	2.20
10	0.80	22	2.20
11	2.30	23	2.20
12	2.50	24	2.20

IC2301	
1	6.40
2	5.60
3	16.80
4	0.00
5	5.60
6	6.30
7	8.60
8	0.00
9	0.00
10	18.30
11	3.10
12	8.70

IC3001	
1	4.10
2	0.20
3	4.10
4	0.00
5	4.10
6	9.00
7	4.30
8	0.00

A - BOARD

	Q001	Q057	Q058	Q070	Q092	Q2350	Q3001	Q3002	Q354
B	0.00	1.50	1.50	4.12	8.90	5.35	1.30	1.30	4.50
C	13.00	0.00	0.00	8.90	1.40	0.00	3.30	3.30	8.50
E	0.00	0.07	0.07	3.50	3.30	3.14	0.70	0.70	3.80

	Q355	Q356	Q357	Q358	Q359	Q360	Q361	Q362	Q411
B	4.30	4.40	2.60	2.60	2.60	0.50	0.40	0.40	2.25
C	8.40	8.40	4.50	4.30	4.40	0.00	0.00	0.00	0.00
E	3.60	3.70	2.00	2.00	2.00	1.10	1.10	1.10	2.90

	Q412	Q451	Q501	Q551	Q560	Q605	Q606	Q801	Q802
B	2.90	5.10	0.40	0.00	0.30	4.80	0.00	0.00	0.70
C	9.00	1.40	56.80	14.70	0.00	0.00	3.30	12.52	0.00
E	2.40	3.30	0.00	0.00	0.60	4.70	0.00	0.00	0.00

	Q820	Q830	Q831
B	130.40	129.80	0.60
C	0.00	130.40	0.20
E	130.80	130.50	0.00

C - BOARD

	Q351	Q352	Q353
B	3.90	3.80	4.00
C	163.00	165.30	160.20
E	3.60	3.60	3.70

Audio signal path block diagram

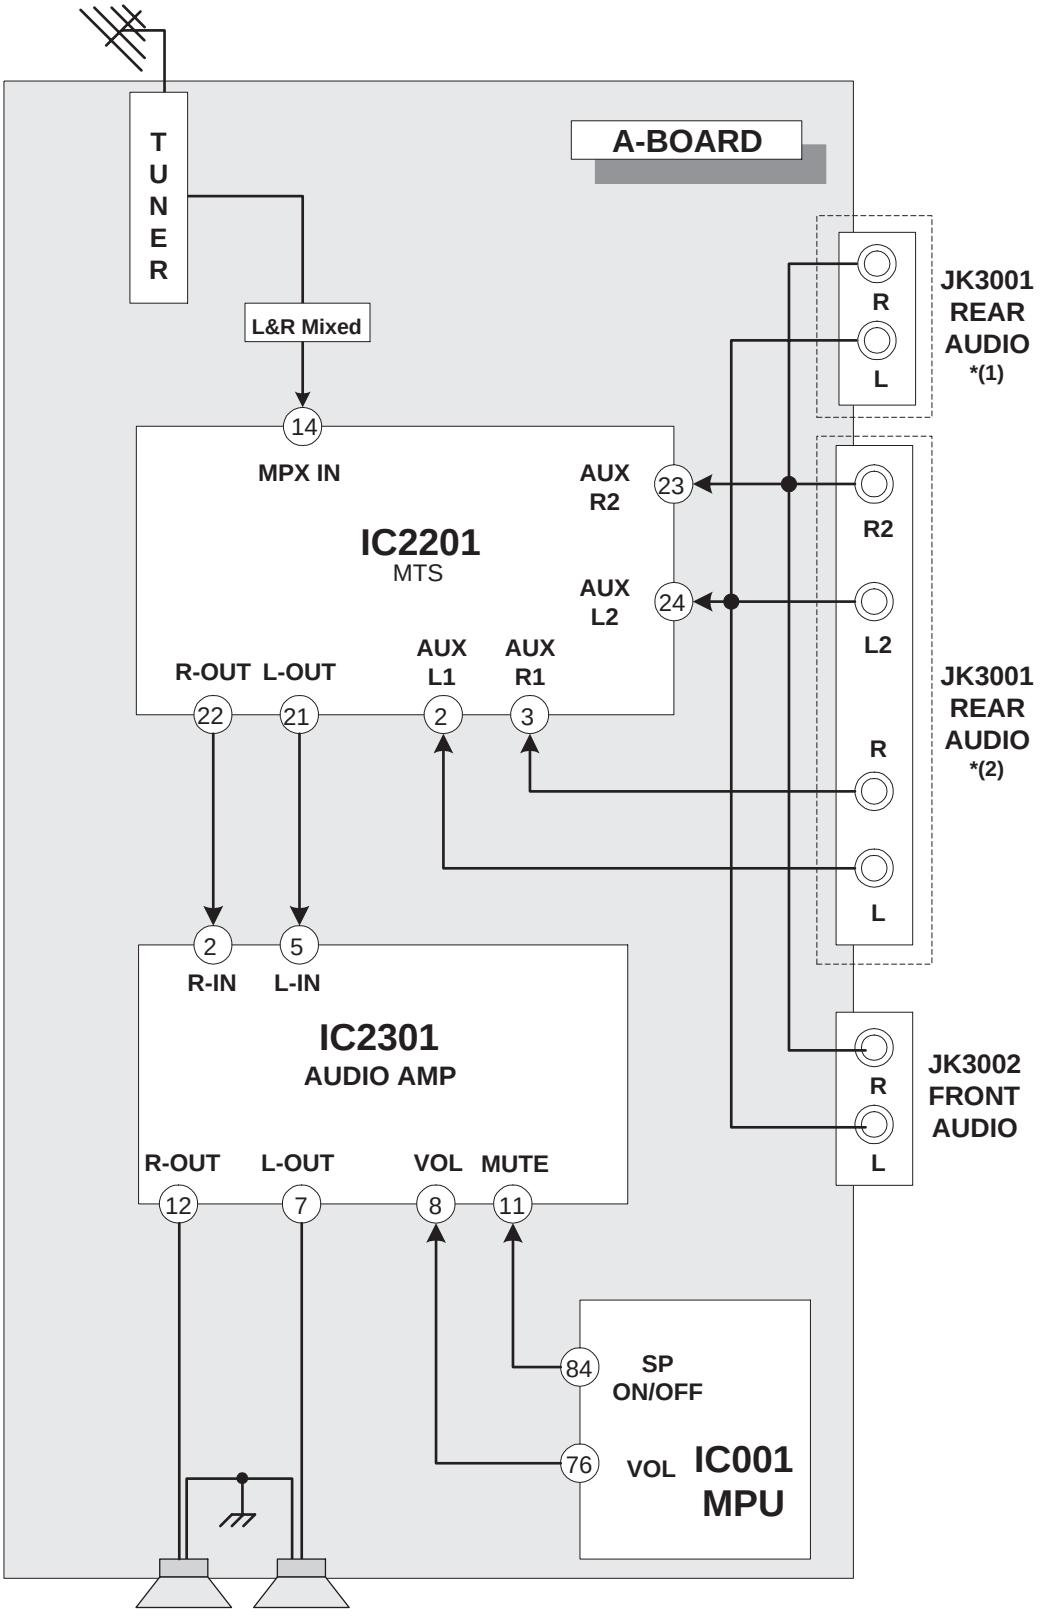

*(1) CT-27G8G / CT-27G8UG

*(2) CT-27C8G / CT-27L8G / CT-27L8UG / CT-27L8SG

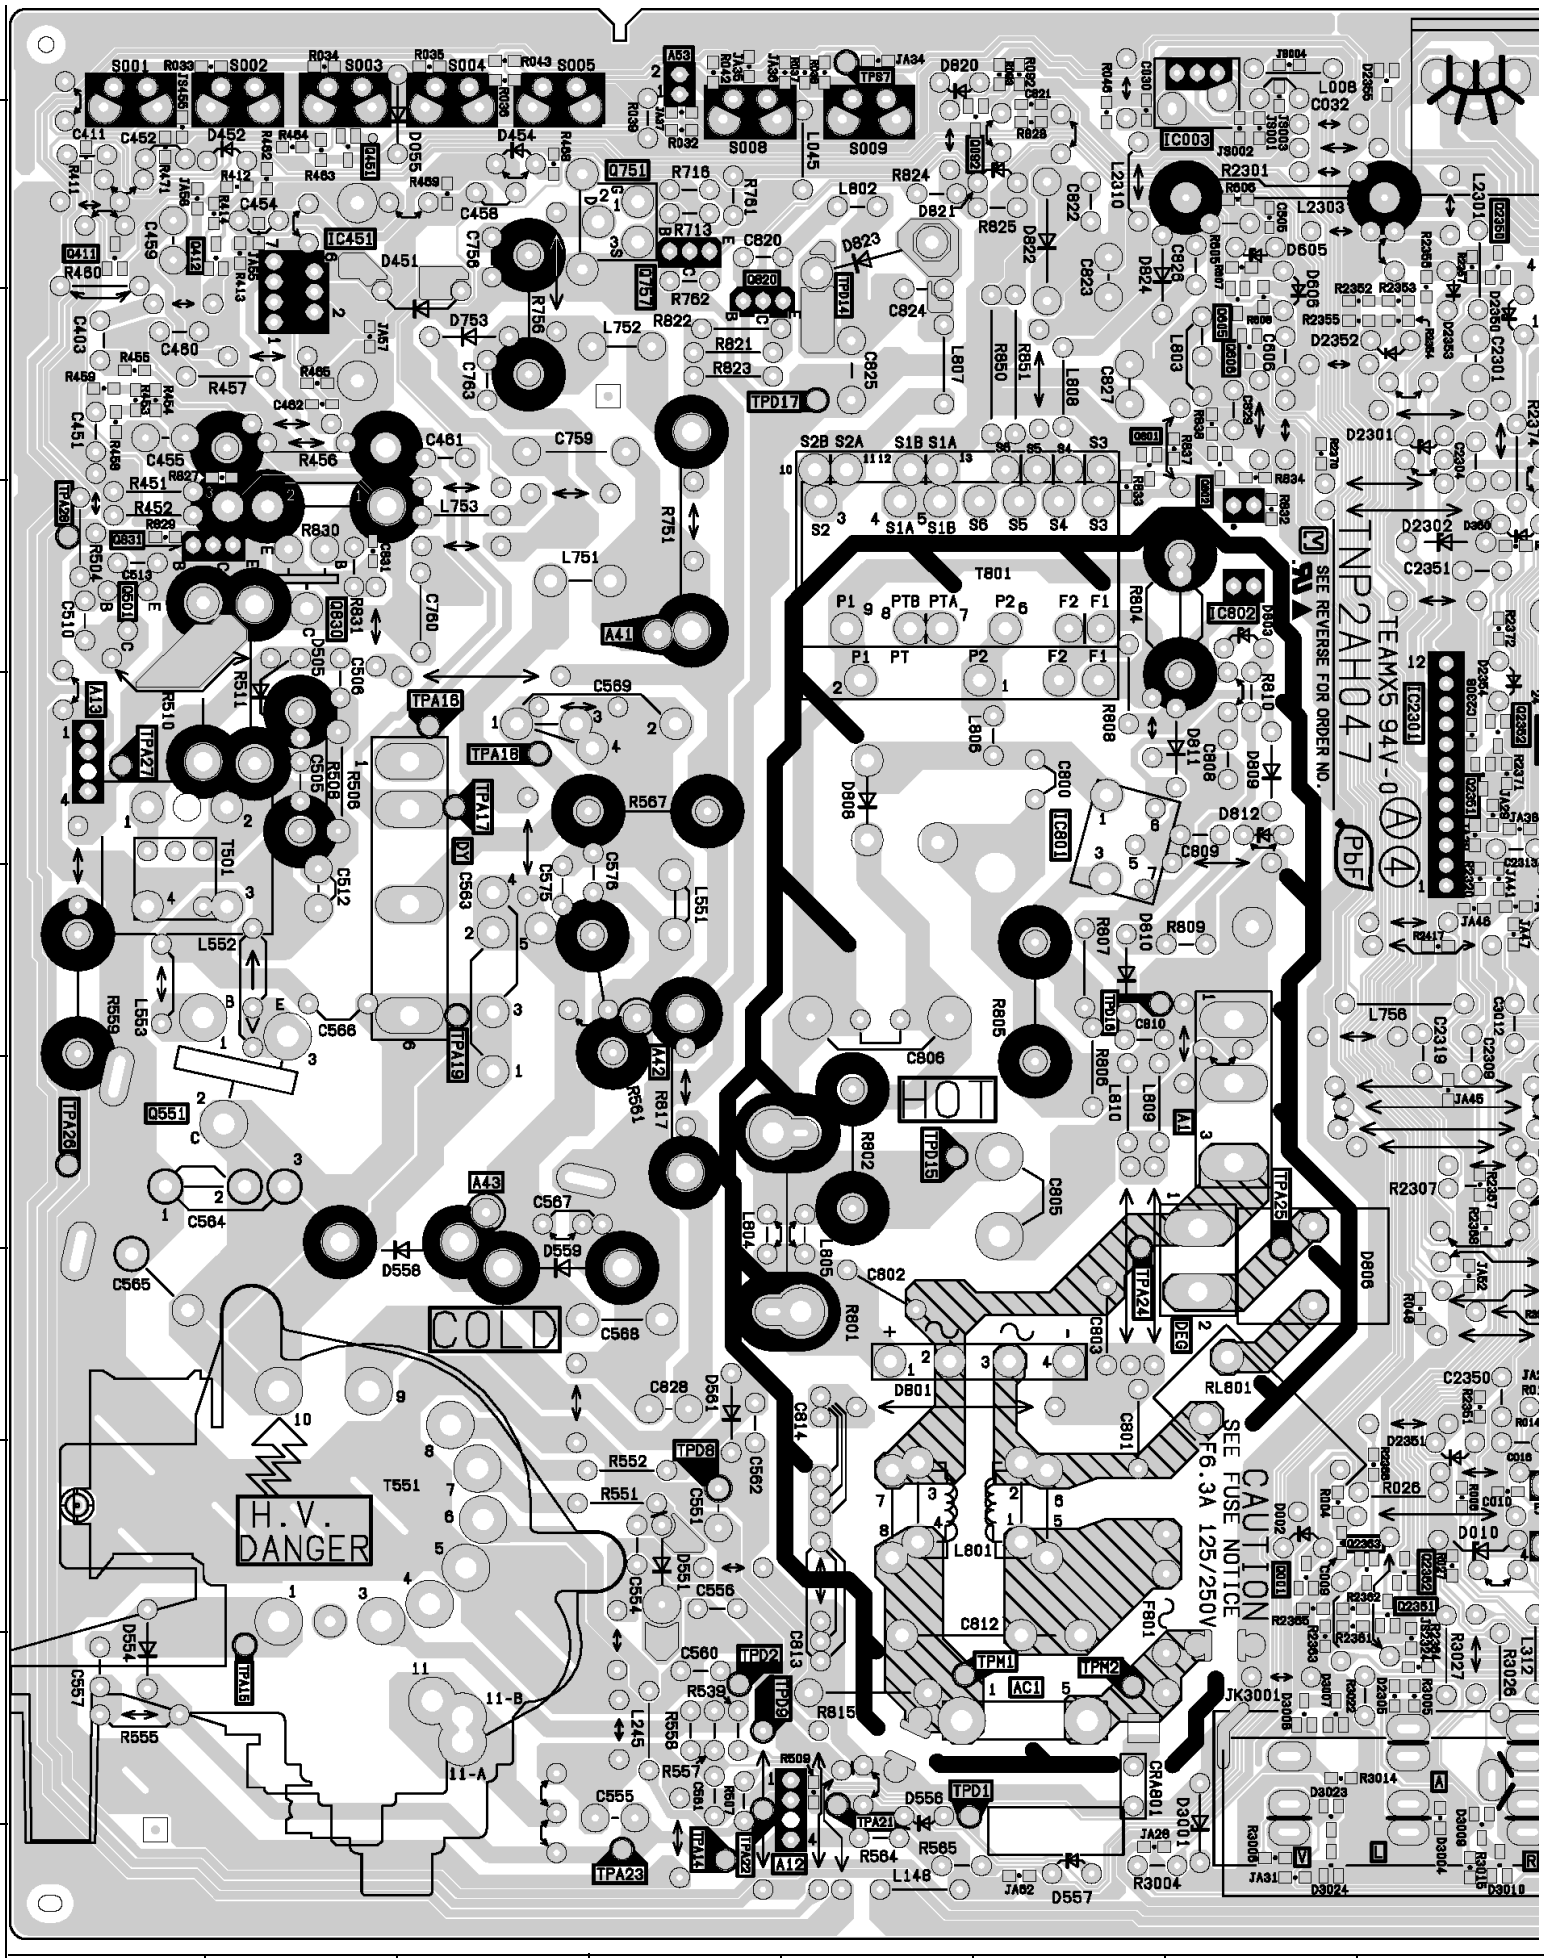
TNP2AH047
TEAMX5 94V-0
SEE REVERSE FOR ORDER NO.
HOT
COLD
H.V. DANGER
CAUTION
SEE FUSE NOTICE
F6.3A 125/250V
T801
T551
IC801
IC802
IC2301
IC003
IC451
L801
L802
L803
L804
L805
L806
L807
L808
L809
L810
L751
L752
L753
L551
L552
L553
L756
L045
L245
L148
L2301
L2303
L2310
L008
L312
RL601
F801
JK3001
CRA801
TPA16
TPA17
TPA18
TPA19
TPA20
TPA21
TPA22
TPA23
TPA24
TPA25
TPA26
TPA27
TPA28
TPD1
TPD2
TPD8
TPD14
TPD15
TPD16
TPD17
TPD18
TPD19
TPM1
TPM2
A11
A12
A13
A41
A42
A43
A53
S001
S002
S003
S004
S005
S008
S009
Q451
Q501
Q551
Q751
Q757
Q801
Q830
Q831
D451
D452
D454
D455
D505
D551
D554
D556
D557
D558
D559
D581
D753
D801
D808
D809
D810
D811
D812
D820
D821
D823
D824
D2301
D2302
D2351
D3001
D3004
D3008
D3010
D3014
D3023
D3024
C451
C452
C454
C455
C456
C458
C459
C460
C461
C482
C501
C505
C506
C510
C512
C513
C551
C554
C555
C556
C557
C560
C562
C563
C564
C565
C566
C567
C568
C575
C576
C589
C760
C763
C801
C802
C803
C805
C806
C808
C809
C810
C811
C812
C813
C814
C820
C822
C823
C824
C825
C827
C828
C2301
C2304
C2309
C2319
C2350
C2351
R451
R452
R453
R454
R455
R456
R457
R459
R460
R471
R482
R483
R484
R485
R488
R501
R502
R504
R505
R506
R508
R510
R511
R539
R551
R552
R555
R557
R558
R559
R561
R564
R565
R567
R716
R751
R756
R762
R713
R801
R802
R804
R805
R806
R807
R808
R809
R811
R815
R821
R822
R823
R824
R825
R827
R828
R829
R830
R831
R833
R834
R837
R2301
R2303
R2307
R2352
R2353
R2355
R2374
R3004
R3005
R3014
R3026
R3027
R3301
JA31
JA32
JA34
JA35
JA36
JA37
JA38
JA39
JA40
JA41
JA42
JA43
JA44
JA45
JA46
JA47
JA48
JA49
JA50
JA51
JA52
JA53
JA54
JA55
JA56
JA57
JA58
JA59
JA60
JA61
JA62
JA63
JA64
JA65
JA66
JA67
JA68
JA69
JA70
JA71
JA72
JA73
JA74
JA75
JA76
JA77
JA78
JA79
JA80
JA81
JA82
JA83
JA84
JA85
JA86
JA87
JA88
JA89
JA90
JA91
JA92
JA93
JA94
JA95
JA96
JA97
JA98
JA99
JA100
JA101
JA102
JA103
JA104
JA105
JA106
JA107
JA108
JA109
JA110
JA111
JA112
JA113
JA114
JA115
JA116
JA117
JA118
JA119
JA120
JA121
JA122
JA123
JA124
JA125
JA126
JA127
JA128
JA129
JA130
JA131
JA132
JA133
JA134
JA135
JA136
JA137
JA138
JA139
JA140
JA141
JA142
JA143
JA144
JA145
JA146
JA147
JA148
JA149
JA150
JA151
JA152
JA153
JA154
JA155
JA156
JA157
JA158
JA159
JA160
JA161
JA162
JA163
JA164
JA165
JA166
JA167
JA168
JA169
JA170
JA171
JA172
JA173
JA174
JA175
JA176
JA177
JA178
JA179
JA180
JA181
JA182
JA183
JA184
JA185
JA186
JA187
JA188
JA189
JA190
JA191
JA192
JA193
JA194
JA195
JA196
JA197
JA198
JA199
JA200
JA201
JA202
JA203
JA204
JA205
JA206
JA207
JA208
JA209
JA210
JA211
JA212
JA213
JA214
JA215
JA216
JA217
JA218
JA219
JA220
JA221
JA222
JA223
JA224
JA225
JA226
JA227
JA228
JA229
JA230
JA231
JA232
JA233
JA234
JA235
JA236
JA237
JA238
JA239
JA240
JA241
JA242
JA243
JA244
JA245
JA246
JA247
JA248
JA249
JA250
JA251
JA252
JA253
JA254
JA255
JA256
JA257
JA258
JA259
JA260
JA261
JA262
JA263
JA264
JA265
JA266
JA267
JA268
JA269
JA270
JA271
JA272
JA273
JA274
JA275
JA276
JA277
JA278
JA279
JA280
JA281
JA282
JA283
JA284
JA285
JA286
JA287
JA288
JA289
JA290
JA291
JA292
JA293
JA294
JA295
JA296
JA297
JA298
JA299
JA300
JA301
JA302
JA303
JA304
JA305
JA306
JA307
JA308
JA309
JA310
JA311
JA312
JA313
JA314
JA315
JA316
JA317
JA318
JA319
JA320
JA321
JA322
JA323
JA324
JA325
JA326
JA327
JA328
JA329
JA330
JA331
JA332
JA333
JA334
JA335
JA336
JA337
JA338
JA339
JA340
JA341
JA342
JA343
JA344
JA345
JA346
JA347
JA348
JA349
JA350
JA351
JA352
JA353
JA354
JA355
JA356
JA357
JA358
JA359
JA360
JA361
JA362
JA363
JA364
JA365
JA366
JA367
JA368
JA369
JA370
JA371
JA372
JA373
JA374
JA375
JA376
JA377
JA378
JA379
JA380
JA381
JA382
JA383
JA384
JA385
JA386
JA387
JA388
JA389
JA390
JA391
JA392
JA393
JA394
JA395
JA396
JA397
JA398
JA399
JA400
JA401
JA402
JA403
JA404
JA405
JA406
JA407
JA408
JA409
JA410
JA411
JA412
JA413
JA414
JA415
JA416
JA417
JA418
JA419
JA420
JA421
JA422
JA423
JA424
JA425
JA426
JA427
JA428
JA429
JA430
JA431
JA432
JA433
JA434
JA435
JA436
JA437
JA438
JA439
JA440
JA441
JA442
JA443
JA444
JA445
JA446
JA447
JA448
JA449
JA450
JA451
JA452
JA453
JA454
JA455
JA456
JA457
JA458
JA459
JA460
JA461
JA462
JA463
JA464
JA465
JA466
JA467
JA468
JA469
JA470
JA471
JA472
JA473
JA474
JA475
JA476
JA477
JA478
JA479
JA480
JA481
JA482
JA483
JA484
JA485
JA486
JA487
JA488
JA489
JA490
JA491
JA492
JA493
JA494
JA495
JA496
JA497
JA498
JA499
JA500
JA501
JA502
JA503
JA504
JA505
JA506
JA507
JA508
JA509
JA510
JA511
JA512
JA513
JA514
JA515
JA516
JA517
JA518
JA519
JA520
JA521
JA522
JA523
JA524
JA525
JA526
JA527
JA528
JA529
JA530
JA531
JA532
JA533
JA534
JA535
JA536
JA537
JA538
JA539
JA540
JA541
JA542
JA543
JA544
JA545
JA546
JA547
JA548
JA549
JA550
JA551
JA552
JA553
JA554
JA555
JA556
JA557
JA558
JA559
JA560
JA561
JA562
JA563
JA564
JA565
JA566
JA567
JA568
JA569
JA570
JA571
JA572
JA573
JA574
JA575
JA576
JA577
JA578
JA579
JA580
JA581
JA582
JA583
JA584
JA585
JA586
JA587
JA588
JA589
JA590
JA591
JA592
JA593
JA594
JA595
JA596
JA597
JA598
JA599
JA600
JA601
JA602
JA603
JA604
JA605
JA606
JA607
JA608
JA609
JA610
JA611
JA612
JA613
JA614
JA615
JA616
JA617
JA618
JA619
JA620
JA621
JA622
JA623
JA624
JA625
JA626
JA627
JA628
JA629
JA630
JA631
JA632
JA633
JA634
JA635
JA636
JA637
JA638
JA639
JA640
JA641
JA642
JA643
JA644
JA645
JA646
JA647
JA648
JA649
JA650
JA651
JA652
JA653
JA654
JA655
JA656
JA657
JA658
JA659
JA660
JA661
JA662
JA663
JA664
JA665
JA666
JA667
JA668
JA669
JA670
JA671
JA672
JA673
JA674
JA675
JA676
JA677
JA678
JA679
JA680
JA681
JA682
JA683
JA684
JA685
JA686
JA687
JA688
JA689
JA690
JA691
JA692
JA693
JA694
JA695
JA696
JA697
JA698
JA699
JA700
JA701
JA702
JA703
JA704
JA705
JA706
JA707
JA708
JA709
JA710
JA711
JA712
JA713
JA714
JA715
JA716
JA717
JA718
JA719
JA720
JA721
JA722
JA723
JA724
JA725
JA726
JA727
JA728
JA729
JA730
JA731
JA732
JA733
JA734
JA735
JA736
JA737
JA738
JA739
JA740
JA741
JA742
JA743
JA744
JA745
JA746
JA747
JA748
JA749
JA750
JA751
JA752
JA753
JA754
JA755
JA756
JA757
JA758
JA759
JA760
JA761
JA762
JA763
JA764
JA765
JA766
JA767
JA768
JA769
JA770
JA771
JA772
JA773
JA774
JA775
JA776
JA777
JA778
JA779
JA780
JA781
JA782
JA783
JA784
JA785
JA786
JA787
JA788
JA789
JA790
JA791
JA792
JA793
JA794
JA795
JA796
JA797
JA798
JA799
JA800
JA801
JA802
JA803
JA804
JA805
JA806
JA807
JA808
JA809
JA810
JA811
JA812
JA813
JA814
JA815
JA816
JA817
JA818
JA819
JA820
JA821
JA822
JA823
JA824
JA825
JA826
JA827
JA828
JA829
JA830
JA831
JA832
JA833
JA834
JA835
JA836
JA837
JA838
JA839
JA840
JA841
JA842
JA843
JA844
JA845
JA846
JA847
JA848
JA849
JA850
JA851
JA852
JA853
JA854
JA855
JA856
JA857
JA858
JA859
JA860
JA861
JA862
JA863
JA864
JA865
JA866
JA867
JA868
JA869
JA870
JA871
JA872
JA873
JA874
JA875
JA876
JA877
JA878
JA879
JA880
JA881
JA882
JA883
JA884
JA885
JA886
JA887
JA888
JA889
JA890
JA891
JA892
JA893
JA894
JA895
JA896
JA897
JA898
JA899
JA900
JA901
JA902
JA903
JA904
JA905
JA906
JA907
JA908
JA909
JA910
JA911
JA912
JA913
JA914
JA915
JA916
JA917
JA918
JA919
JA920
JA921
JA922
JA923
JA924
JA925
JA926
JA927
JA928
JA929
JA930
JA931
JA932
JA933
JA934
JA935
JA936
JA937
JA938
JA939
JA940
JA941
JA942
JA943
JA944
JA945
JA946
JA947
JA948
JA949
JA950
JA951
JA952
JA953
JA954
JA955
JA956
JA957
JA958
JA959
JA960
JA961
JA962
JA963
JA964
JA965
JA966
JA967
JA968
JA969
JA970
JA971
JA972
JA973
JA974
JA975
JA976
JA977
JA978
JA979
JA980
JA981
JA982
JA983
JA984
JA985
JA986
JA987
JA988
JA989
JA990
JA991
JA992
JA993
JA994
JA995
JA996
JA997
JA998
JA999
JA1000

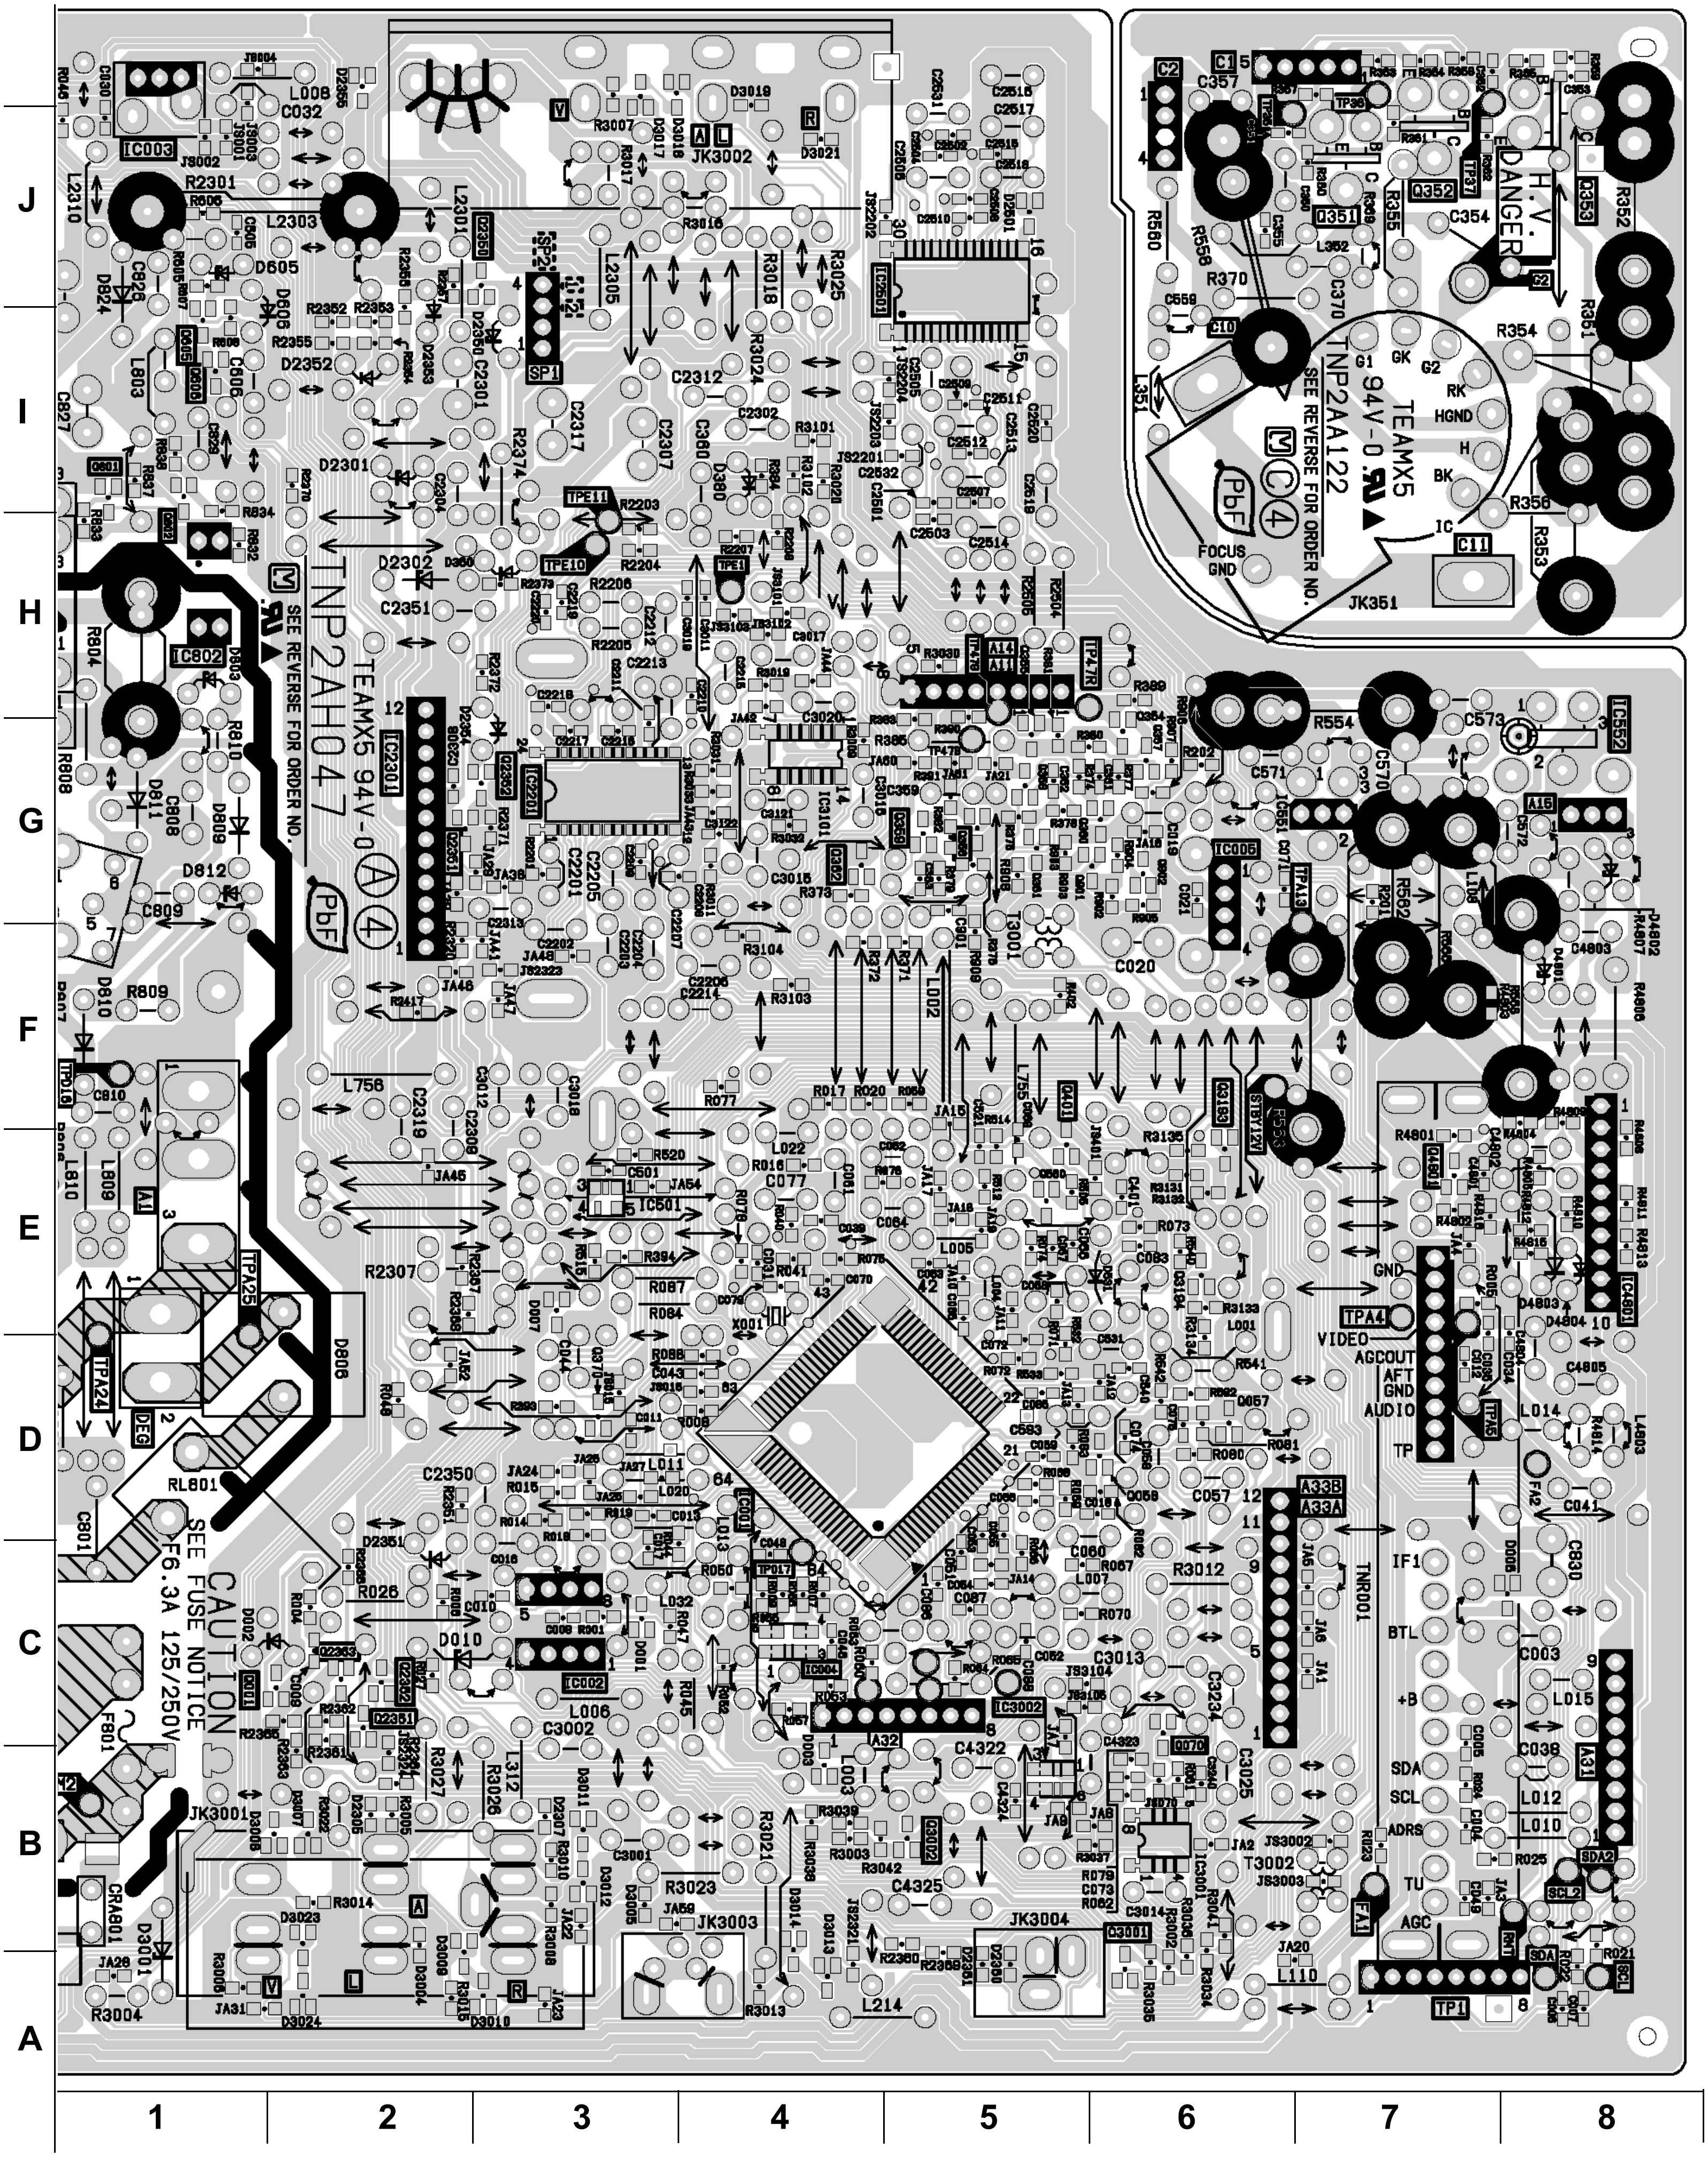

J
I
H
G
F
E
D
C
B
A
1
2
3
4
5
6
7
8
TNP2AH047
TEAMX5 94V-0
SEE REVERSE FOR ORDER NO.
TNP2AA122
H.V. DANGER
JK351
FOCUS GND
G1
GK
G2
RK
HGND
H
BK
IC
CAUTION
SEE FUSE NOTICE
F6.3A 125/250V
RL801
JK3001
JK3002
JK3003
JK3004
TNR001
IF1
BTL
+B
SDA
SCL
ADRS
TU
AGC
GND
VIDEO
AGCOUT
AFT
AUDIO
TP
TP1
IC4801
IC552
IC2301
IC2201
IC2501
IC3001
IC501
IC002
IC003
IC802

A-BOARD 2 of 2 TNP2AH047 C-BOARD TNP2AA122 CT-27C8G / CT-27G8G / CT-27G8UG / CT-27L8G / CT-27L8UG / CT-27L8SG

Video signal path block diagram

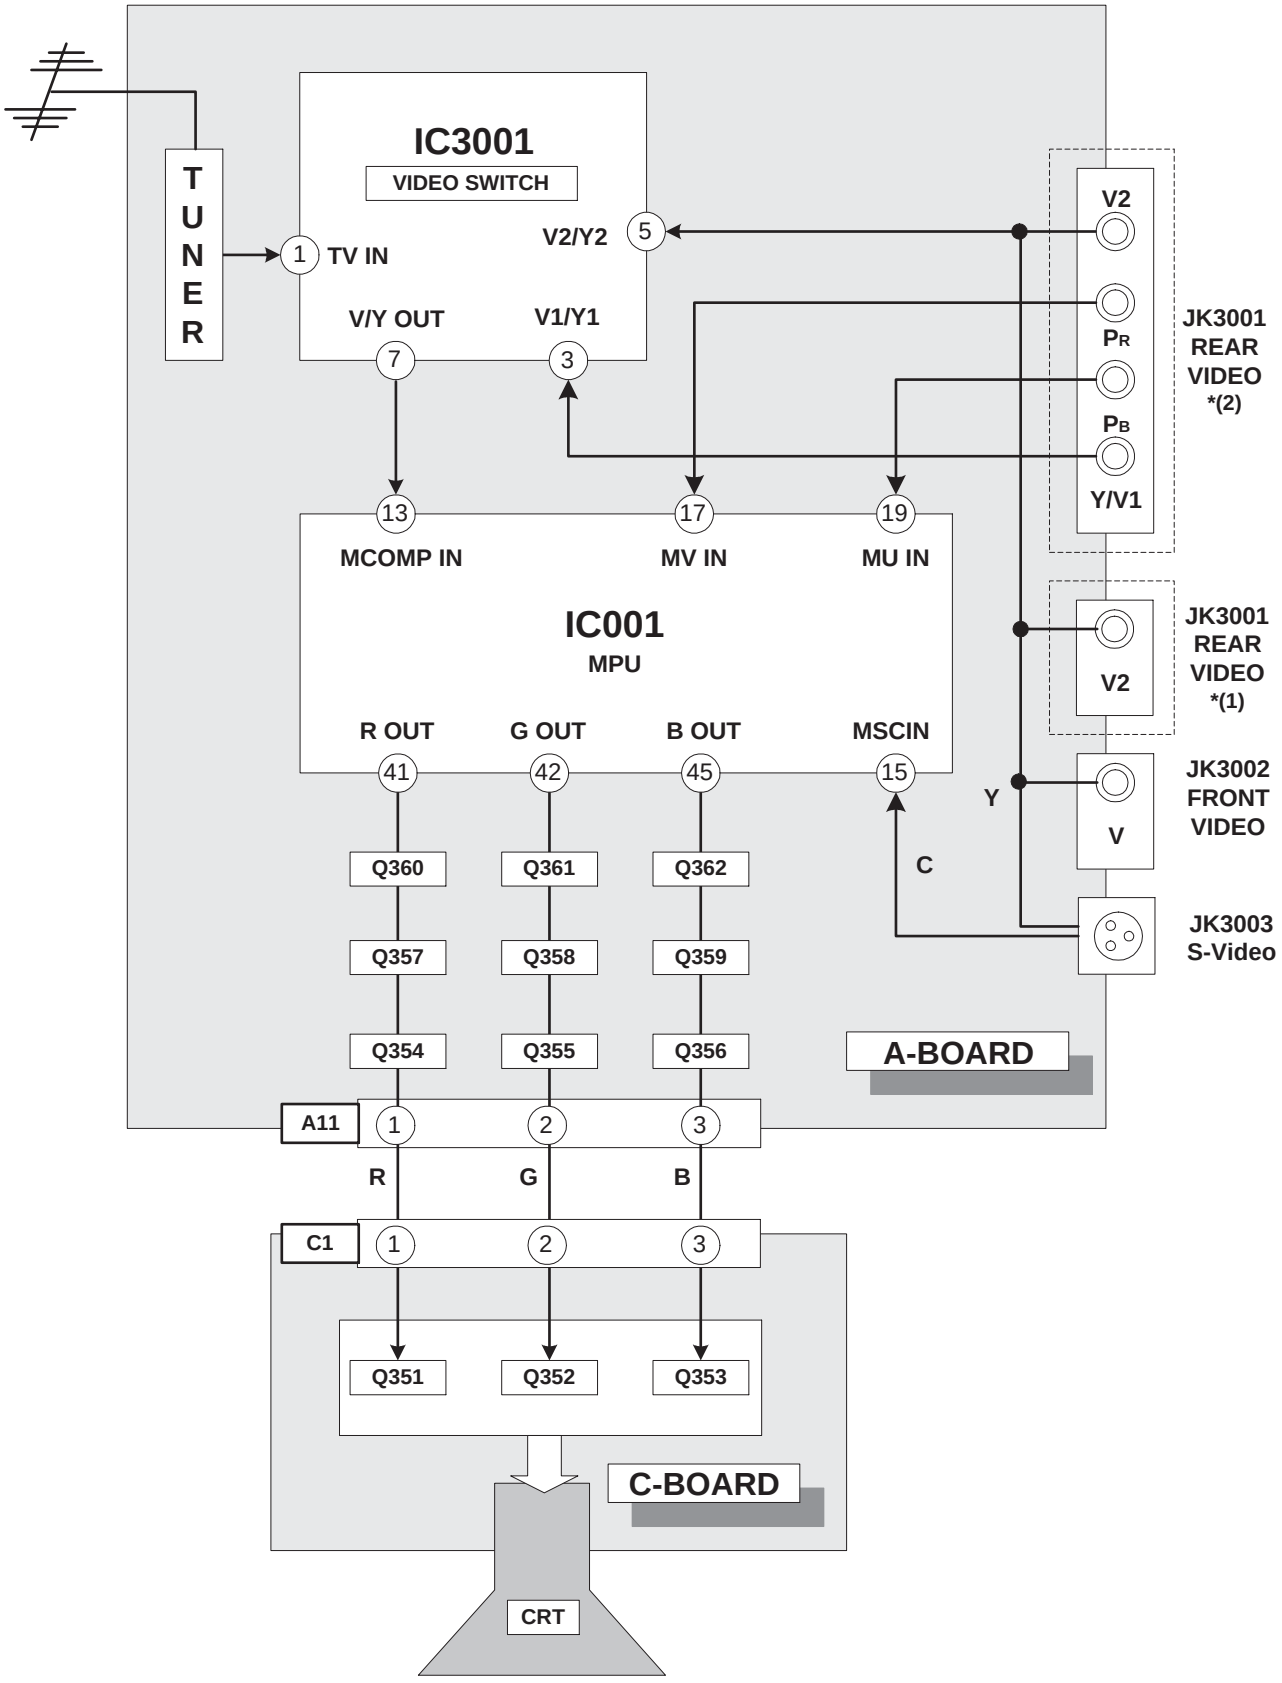

*(1) CT-27G8G / CT-27G8UG

*(2) CT-27C8G / CT-27L8G / CT-27L8UG / CT-27L8SG

A-Board

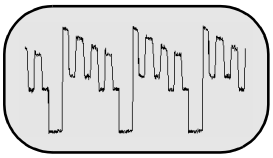

① **4 Vp-p**
A11 PIN 3 (BLUE OUT)

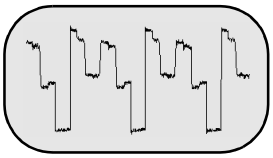

② **4 Vp-p**
A11 PIN 1 (RED OUT)

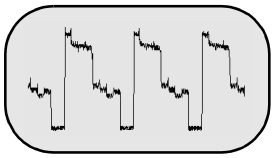

③ **4.32 V-p**
A11 PIN 2 (GREEN OUT)

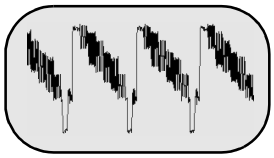

④ **1.3 Vp-p**
TPA5 (VIDEO)

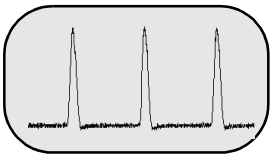

⑤ **3.28 Vp-p**
IC001 PIN 36 (FBP IN)

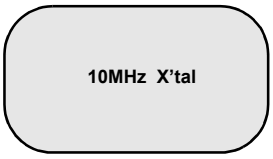

⑥
IC001 PIN 50 (OSC)

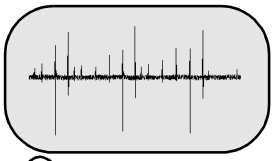

⑦ **600mv Vp-p**
IC451 PIN 1 (VERT IN)

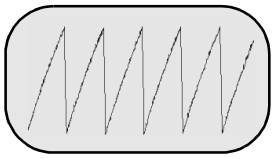

⑧ **1.88 Vp-p**
Q4111 B (V DRIVE)

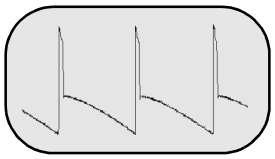

⑨ **58.0 Vp-p**
IC451 PIN 5(V OUT)

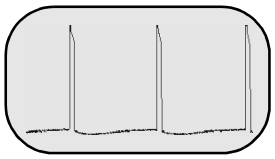

⑩ **30.4 Vp-p**
IC451 PIN 3 (PUMP UP)

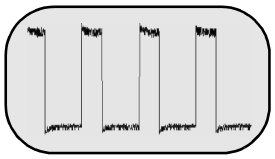

⑪ **3.4 Vp-p**
IC501 PIN 4 (H-DRIVE)

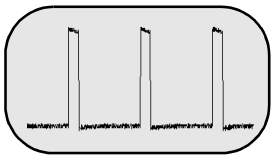

⑫ **111 Vp-p**
A12 PIN 2 (HEATER)

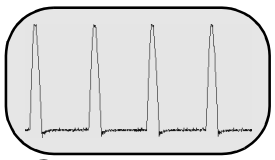

⑬ **1.29 kVp-p**
Q551 Collector (H OUT)

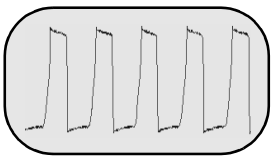

⑭ **398 Vp-p**
IC801 PIN 1

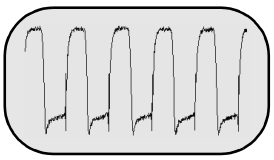

⑮ **2.92 Vp-p**
IC801 PIN 7

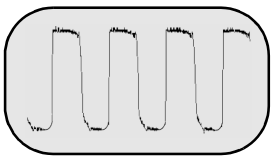

⑯ **121 Vp-p**
Q501 Collector